REZNOR®

Form I-UEAS (Version B)
Obsoletes I-UEAS (Version A)

Installation / Operation / Maintenance

Applies to: Model UEAS, High-Efficiency, Separated-Combustion, Low-Static Unit Heater

⚠ WARNING:

FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

Be sure to read and understand the installation, operation, and service instructions in this manual.

Improper installation, adjustment, alteration, service, or maintenance can cause serious injury, death, or property damage.

- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**
- **WHAT TO DO IF YOU SMELL GAS**
  - **Do not try to light any appliance.**
  - **Do not touch any electrical switch; do not use any phone in your building.**
  - **Leave the building immediately.**
  - **Immediately call your gas supplier from a phone remote from the building. Follow the gas supplier's instructions.**
  - **If you cannot reach your gas supplier, call the fire department.**
- **Installation and service must be performed by a qualified installer, service agency, or the gas supplier.**

This booklet includes installation, operation, maintenance, and service information. Before beginning any procedure, carefully review all information, paying particular attention to the warnings. All installation procedures must be in compliance with all codes and requirements of authorities having jurisdiction. Keep this booklet for future reference.

Table of Contents

1.0 General 2
- 1.1 Hazard Labels and Notices 2
- 1.2 General Information 3
- 1.3 Warranty 3
- 1.4 Installation Codes 3

2.0 Unit Heater Location 4

3.0 Receiving, Uncrating, and Preparing for Installation 5

4.0 Dimensions and Clearances 6
- 4.1 Dimensions 6
- 4.2 Clearances 7

5.0 High Altitude Operation 7

6.0 Hanging the Heater..... 7

7.0 Mechanical 8
- 7.1 Gas Piping and Pressure.....8
- 7.2 Venting and Combustion Air 13
- 7.3 Condensate Drain System.....26

8.0 Electrical and Wiring 28
- 8.1 Electrical Supply 28
- 8.2 24V Control Wiring Connections 28
- 8.3 Typical Wiring Diagram.....29

9.0 Controls..... 30
- 9.1 Thermostat.....30
- 9.2 Gas Valve 30
- 9.3 Safety Controls 30

10.0 Ignition System..... 31

11.0 Commissioning and Startup..... 34
- 11.1 Check the Installation Prior to Startup 34
- 11.2 Heater Startup.....34
- 11.3 Check Installation After Startup.....36

12.0 Maintenance and Service..... 36
- 12.1 Maintenance Schedule 36
- 12.2 Maintenance Procedures.....37
- 12.3 Troubleshooting 43

APPENDIX 46

INDEX..... 47

INSTALLATION RECORD 48

1.0 General

1.1 Hazard Labels and Notices

There are warning labels on the unit and throughout this manual. For your safety, read the definitions below and comply with all boxes labeled **CAUTION, WARNING,** and **DANGER** during installation, operation, maintenance and service of this heater.

Definitions of Hazard Intensity Levels in this Manual

HAZARD INTENSITY LEVELS

1. **DANGER: Failure to comply will result in severe personal injury or death and/or property damage.**
2. **WARNING: Failure to comply could result in severe personal injury or death and/or property damage.**
3. **CAUTION: Failure to comply could result in minor personal injury and/or property damage.**

WARNING

Gas-fired appliances are not designed for use in hazardous atmospheres containing flammable vapors or combustible dust, in atmospheres containing chlorinated or halogenated hydrocarbons, or in applications with airborne silicone substances. See Hazard Levels above.

WARNING

Should overheating occur, or the gas supply fail to shut off, shut off the manual gas valve to the appliance before shutting off the electrical supply.

WARNING

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any gas control that has been under water.

WARNING

Installation should be done by a qualified agency in accordance with these instructions. The qualified service agency installing this high efficiency separated-combustion system is responsible for the installation.

1.2 General Information

Model UEAS high-efficiency unit heaters are design certified by ITS for use in industrial and commercial installations in the United States and Canada. Instructions in this manual apply only to Model UEAS heaters.

Model UEAS heaters are available for use with either natural or propane gas. The type of gas, the input rate, and the electrical supply requirement are shown on the heater rating plate. Check the rating plate to determine if the heater is appropriate for the intended installation. **NOTE**: All Model UEAS heaters are factory equipped for use with natural gas and include a conversion kit for field conversion for use with propane.

Model UEAS heaters have a titanium stabilized primary heat exchanger with a MacroChannel® secondary heat exchanger (patent pending).

CAUTION

Model UEAS unit heaters should not be used in an application where the heated space temperature is below 50°F. The combination of low space and combustion air temperatures may result in condensate freezing in the secondary heat exchanger and/or condensate drain.

1.3 Warranty

Refer to the limited warranty information on the Warranty Form shipped with the heater.

Warranty is void if ...

a. Wiring is not in accordance with the diagram furnished with the heater.
b. The unit is installed without proper clearance to combustible materials.
c. A fan model is connected to a duct system or if the air delivery system is modified.

1.4 Installation Codes

These units must be installed in accordance with local building codes. In the absence of local codes, in the United States, the unit must be installed in accordance with the National Fuel Gas Code, ANSI Z223.1 NFPA 54. A Canadian installation must be in accordance with the CSA B149 Installation Codes. These codes

1.0 General (cont'd)

1.4 Installation Codes (cont'd)

are available from CSA Information Services, 1-800-463-6727. Local authorities having jurisdiction should be consulted before installation is made to verify local codes and installation procedure requirements.

Special Installations (Aircraft Hangars/ Repair Garages/Parking Garages)

Installations in aircraft hangars should be in accordance with ANSI/NFPA No. 409 (latest edition), Standard for Aircraft Hangars; in public garages in accordance with ANSI/NFPA No. 88A (latest edition), Standard for Parking Structures; and for repair garages in accordance with ANSI/NFPA No. 88B (latest edition), Standard for Repair Garages. In Canada, installations in aircraft hangars should be in accordance with the requirements of the enforcing authorities, and in public garages in accordance with CSA B149 codes.

California Warning Label

If the heater is being installed in the state of California, the installer **MUST** attach a warning label on the outside of the access door. Find the California Warning label, P/N 196977, in the plastic bag with this installation manual. Select a location on the heater access panel. Be sure the surface is clean and dry and adhere the label.

Massachusetts Requirement

If the heater is being installed in the Commonwealth of Massachusetts, this unit must be installed by a licensed plumber or licensed gas fitter.

2.0 Unit Heater Location

Use the throw data and location information in this section; clearances and dimensions in Paragraph 4; weights and hanging instructions in Paragraph 6; and piping, venting, and condensate drain requirements in Paragraph 7, to determine where to suspend the heater. Due to possible condensate freezing in the secondary heat exchanger and/or condensate drain, this heater should not be used in an application where the space temperature of the location is below 50°F.

Heater Throw

FIGURE 1 - Throw for Fan Model UEAS

NOTE: Throws listed are with standard adjustable horizontal louvers at the angles listed (angle is relative to the top of the heater). Throw pattern changes with the addition of optional vertical louvers and/or downturn nozzles.

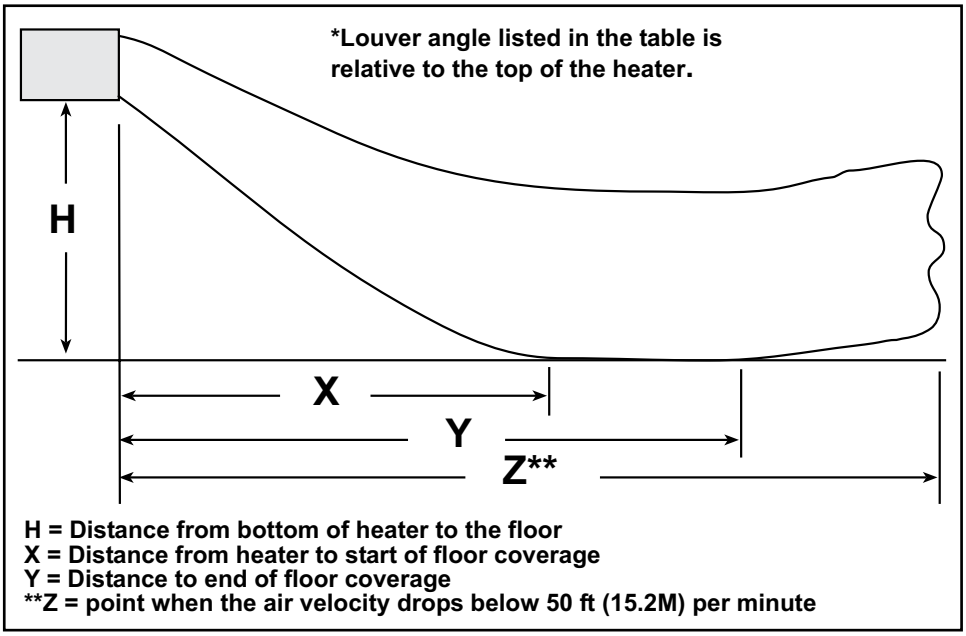

Dimensions X, Y, and Z (feet) Model UEAS with Standard Horizontal Louvers at Mounting Heights of 5 - 18 ft

H	130				180				260				310			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*
8 ft	13	24	73	-26°	16	30	93	-20°	15	28	94	-24°	17	31	105	-20°
10 ft	14	24	69	-32°	17	31	91	-25°	16	28	89	-29°	18	32	103	-25°
12 ft	14	24	64	-39°	18	31	88	-30°	17	28	85	-34°	19	32	98	-30°
14 ft	14	22	59	-45°	19	30	84	-34°	17	27	80	-40°	20	32	95	-34°
16 ft	13	20	53	-51°	19	29	79	-39°	17	25	74	-45°	21	31	90	-38°
18 ft	11	17	44	-58°	19	28	74	-44°	16	24	66	-51°	20	30	85	-43°

Dimensions X, Y, and Z (meters) Model UEAS with Standard Horizontal Louvers at Mounting Heights of 1.5 - 5.5M																
H	130				180				260				310			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*
2.4 M	4	7	22	-26°	5	9	28	-20°	5	9	29	-24°	5	9	32	-20°
3.0 M	4	7	21	-32°	5	9	28	-25°	5	9	27	-29°	6	10	31	-25°
3.7 M	4	7	20	-39°	6	9	27	-30°	5	9	26	-34°	6	10	30	-30°
4.3 M	4	7	18	-45°	6	9	26	-34°	5	8	24	-40°	6	10	29	-34°
4.9 M	4	6	16	-51°	6	9	24	-39°	5	8	23	-45°	6	9	27	-38°
5.5 M	3	5	13	-58°	6	9	23	-44°	5	7	20	-51°	6	9	26	-43°

Location Recommendations

Locate the heater so that it is a minimum of five feet (1.5M) above the floor and in compliance with the clearances in Paragraph 4.2.

WARNING

Internal heater surfaces that are accessible from outside the heater will cause burns if touched. Suspend the heater a minimum of 5 feet (1.5M) above the floor.

For best results, the heater should be placed with certain rules in mind. In general, a unit should be located from 8 to 12 feet (2.4-3.7M) above the floor. Units should always be arranged to blow toward or along exposed wall surfaces, if possible. Where two or more units are installed in the same room, a general scheme of air circulation should be maintained for best results.

Suspended heaters are most effective when located as close to the working zone as possible, and this fact should be kept in mind when determining the mounting heights to be used. However, care should be exercised to avoid directing the discharged air directly on the room occupants.

Partitions, columns, counters, or other obstructions should be taken into consideration when locating the unit heater so that a minimum quantity of airflow will be deflected by such obstacles.

When units are located in the center of the space to be heated, the air should be discharged toward the exposed walls. In large areas, units should be located to discharge air along exposed walls with extra units provided to discharge air in toward the center of the area.

At those points where infiltration of cold air is excessive, such as at entrance doors and shipping doors, it is desirable to locate the unit so that it will discharge directly toward the source of cold air from a distance of 15 to 20 feet (4.6-6.1M).

CAUTION: Do not locate the heater where it may be exposed to water spray, rain, or dripping water.

Hazards of Chlorine - applies to location of Model UEAS heater with regard to combustion air inlet

The presence of chlorine vapors in the combustion air of gas-fired heating equipment presents a potential corrosion hazard. Chlorine found usually in the form of freon or degreaser vapors, when exposed to flame will precipitate from the compound, and go into solution with any condensation that is present in the heat exchanger or associated parts. The result is hydrochloric acid which readily attacks all metals including 300 grade stainless steel. Care should be taken to separate these vapors from the combustion process. This may be done by wise location of the unit vent and combustion air terminals with regard to exhausters or prevailing wind directions. Chlorine is heavier than air. Keep these facts in mind when determining installation location of the heater in relation to building exhaust systems.

3.0 Receiving, Uncrating, and Preparing for Installation

This unit was test operated and inspected at the factory prior to crating and was in operating condition. If the heater has incurred any damage in shipment, document the damage with the transporting agency and contact an authorized Reznor® Distributor. If you are an authorized Distributor, follow the FOB freight policy procedures as published by Thomas & Betts for Reznor® products.

3.0 Receiving, Uncrating, and Preparing for Installation (cont'd)

IMPORTANT: Shipping brackets are attached with cabinet screws. When removing shipping brackets, re-insert ALL screws into the cabinet.

Check the rating plate for the gas specifications and electrical characteristics of the heater to be sure that they are compatible with the gas and electric supplies at the installation site. A conversion kit is included with the heater for converting for use with propane; see instructions in Paragraph 7.1.4.

Read this booklet and become familiar with the installation requirements of your particular heater. If you do not have knowledge of local requirements, check with the local gas company or any other local agencies who might have requirements concerning this installation.

Before beginning, make preparations for necessary supplies, tools, and manpower. Be sure that the vent/combustion air kit (either vertical Option CC2 or horizontal Option CC6) is at the job site.

If the installation includes optional vertical louvers, downturn nozzle, and/or a hanger kit, install these options before the heater is suspended. Instructions are in this form or in the option package; option packages are shipped separately.

Other shipped-separate items could include a thermostat bracket kit, a thermostat, and/or a thermostat guard. Be sure all options ordered are at the installation site.

4.0 Dimensions and Clearances

4.1 Dimensions

FIGURE 2 - Model UEAS Dimensions

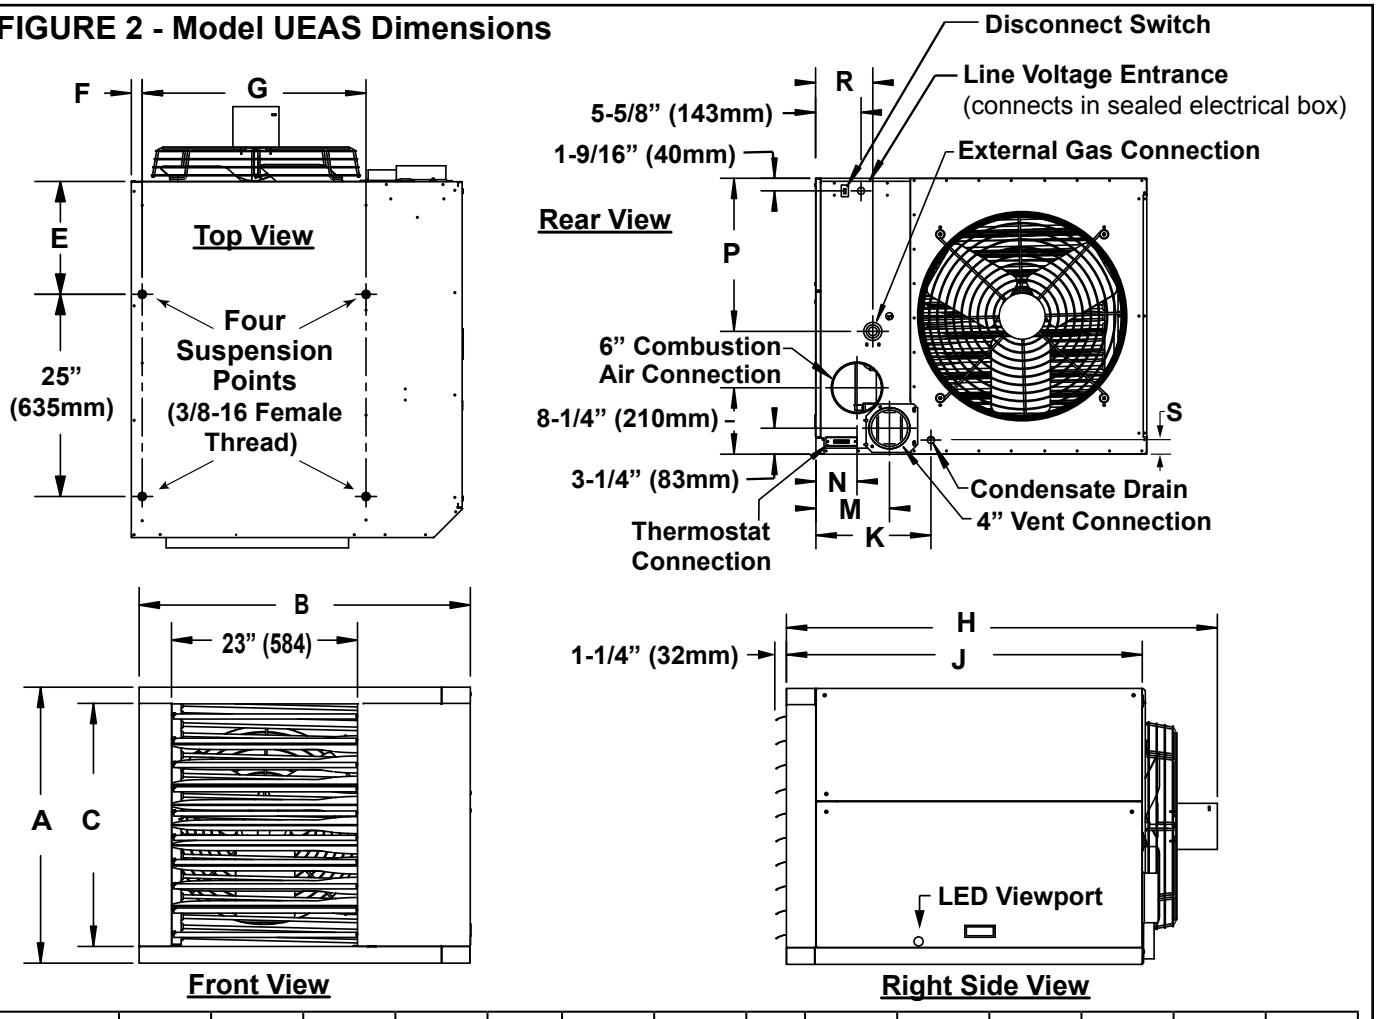

Size	A	B	C	E	F	G	H	J	K	M	N	P	R	S
Dimensions - inches (±1/8 inch)														
130, 180	20-1/8	39-3/16	16-1/16	11-15/16	2-3/8	25-11/16	50-1/2	42	13-7/16	8-5/16	4-5/16	5-1/16	6-5/16	1-3/4
260, 310	34-1/8	40-15/16	30-1/16	13-15/16	1-3/8	27-11/16	53-5/16	44	14-7/32	9-3/32	5-1/16	18-15/16	7-3/4	1-3/8
Dimensions - mm (±3 mm)														
130, 180	511	995	408	303	60	652	1283	1067	341	211	110	129	160	44
260, 310	867	1039	764	354	35	703	1354	1118	361	231	129	481	197	35

FIGURE 3 - Dimension "T" With Optional Downturn Nozzle

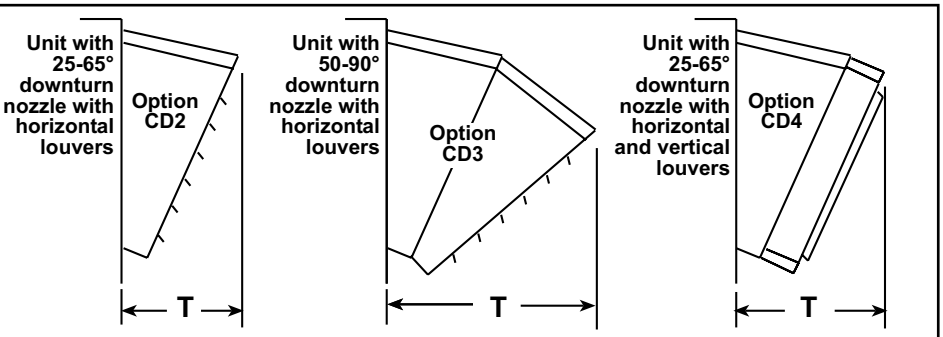

"T" for UEAS Size	with Option CD2		with Option CD3		with Option CD4	
	inches	mm	inches	mm	inches	mm
130, 180	11-1/2	292	19-7/8	505	14-1/2	368
260, 310	18-1/2	470	32	813	21-1/2	546

4.2 Clearances

Units must be installed so that the clearances in the table are provided for combustion air space, inspection and service, and for proper spacing from combustible construction. Clearance to combustibles is defined as the minimum distance from the heater to a surface or object that is necessary to ensure that a surface temperature of 90°F above the surrounding ambient temperature is not exceeded.

Clearances

Model UEAS 130, 180, 260, 310	Top		Flue Connector		Access Panel		Non-Access Side		Bottom*		Rear**	
	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm
	4	102	6	152	18	457	2	51	1	25	18	457

*Suspend the heater so that the bottom is a minimum of 5 feet (1.5M) above the floor.
** Measure rear clearance from the fan motor.

5.0 High Altitude Operation

If the heater is being installed at an elevation above 2000 ft (610M), the input rate will have to be derated. This is done by adjusting the valve outlet pressure. Adjusting the valve outlet pressure is done after the heater is in operation; follow the instructions in Paragraph 7.1.3. Capacities and inputs for derated units are also listed in Paragraph 7.1.3.

6.0 Hanging the Heater

WARNING

Unit must be level for proper operation. Do not place or add additional weight to the suspended heater. Hazard Levels, page 2.

Before suspending the heater, check the supporting structure to be used to verify that it has sufficient load-carrying capacity to support the weight of the unit.

Model UEAS - Weight				
Size	**130**	**180**	**260**	**310**
lbs	230	245	360	395
kg	104	111	163	179

WARNING

Check the supporting structure to be used to verify that it has sufficient load carrying capacity to support the weight of the unit. Suspend the heater only from the threaded nut retainers or with a manufacturer provided kit. Do NOT suspend from the heater cabinet.

When the heater is lifted for suspension, support the bottom of the heater with plywood or other appropriately placed material. If the bottom is not supported, damage could occur. Before hanging, verify that any screws used for holding shipping brackets were re-installed in the cabinet.

The heater has four-point suspension. Suspension point dimensions are shown in **FIGURE 2**, page 6. A 3/8"-16 threaded nut retainer is located at each suspension point (**FIGURE 4A**).

6.0 Hanging the Heater (cont'd)

If ordered with swivel connectors, Option CK10, for 1" pipe attach the swivels at the threaded nut retainers. Suspend with 1" pipes (**FIGURE 4B**).

FIGURE 4A - Suspending the Heater with Rods from the Threaded Nut Retainers

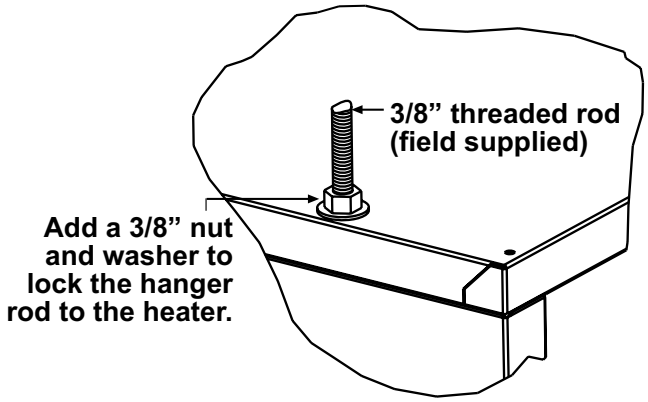

Be sure the threaded hanger rods are locked to the heater as illustrated. Length of threaded rod extending into the heater MUST NOT exceed 1/2" (13mm).

Recommended maximum hanger rod length is 6 feet (1.8M).

FIGURE 4B - Swivel Connectors, Option CK10, to Suspend the Heater from 1" Pipes

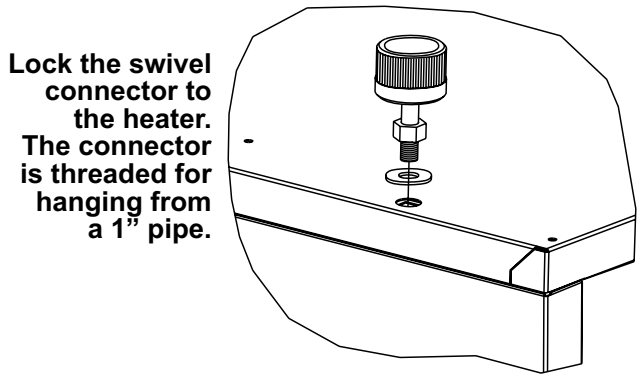

Be sure the threaded swivel connectors are locked to the heater as illustrated.

7.0 Mechanical

7.1 Gas Piping and Pressure

7.1.1 Gas Supply

WARNING

This appliance is equipped for a maximum gas supply pressure of 1/2 psi, 3.5 kPa, or 14 inches water column. Supply pressure greater than 1/2 psi requires installation of an additional lockup-type service regulator external to the unit.

WARNING: PRESSURE TESTING SUPPLY PIPING

Test Pressures Above 1/2 PSI: Disconnect the heater and manual valve from the gas supply line which is to be tested. Cap or plug the supply line.

Test Pressures Below 1/2 PSI: Before testing, close the manual valve on the heater.

All piping must be in accordance with requirements outlined in the National Fuel Gas Code ANSI Z223.1/NFPA 54 (latest edition) or CSA-B149.1 and B149.2 (See Paragraph 2). Gas supply piping installation should conform with good practice and with local codes. Support gas piping with pipe hangers, metal strapping, or other suitable material; do not rely on the heater to support the gas pipe.

The heater is orificed for operation with natural gas having a heating value of 1000 (± 50) BTU per cubic ft or propane gas with a heating value of 2500 (± 100) BTU per cubic ft. If the gas at the installation does not meet these specifications, consult the factory for proper orificing.

Pipe joint compounds (pipe dope) shall be resistant to the action of liquefied petroleum gas or any other chemical constituents of the gas being supplied.

Sizing Gas Supply Line

Capacity of Piping

Cubic Feet per Hour based on 0.3" w.c. Pressure Drop

Specific Gravity for Natural Gas -- 0.6 (Natural Gas -- 1000 BTU/Cubic Ft)

Specific Gravity for Propane Gas -- 1.6 (Propane Gas -- 2550 BTU/Cubic Ft)

Length of Pipe	Diameter of Pipe											
	1/2"		3/4"		1"		1-1/4"		1-1/2"		2"	
	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane
20'	92	56	190	116	350	214	730	445	1100	671	2100	1281
30'	73	45	152	93	285	174	590	360	890	543	1650	1007
40'	63	38	130	79	245	149	500	305	760	464	1450	885
50'	56	34	115	70	215	131	440	268	670	409	1270	775
60'	50	31	105	64	195	119	400	244	610	372	1105	674
70'	46	28	96	59	180	110	370	226	560	342	1050	641
80'	43	26	90	55	170	104	350	214	530	323	990	604
90'	40	24	84	51	160	98	320	195	490	299	930	567
100'	38	23	79	48	150	92	305	186	460	281	870	531
125'	34	21	72	44	130	79	275	168	410	250	780	476
150'	31	19	64	39	120	73	250	153	380	232	710	433
175'	28	17	59	36	110	67	225	137	350	214	650	397
200'	26	16	55	34	100	61	210	128	320	195	610	372

Note: When sizing supply lines, consider possibilities of future expansion and increased requirements.

Refer to National Fuel Gas Code for additional information on line sizing.

7.1.2 Gas Connection

Install a ground joint union and a manual shutoff valve upstream of the unit control system as shown in **FIGURE 5**. Installation of a trap with a minimum 3” (76mm) drip leg is required. he unit is equipped with a nipple that extends outside the cabinet. The gas connection is either 1/2” or 3/4”.

Gas Connection	
Size	**inches**
130, 180	**1/2**
260, 310	**3/4**

Leak-test all connections by brushing on a leak-detecting solution.

WARNING

All components of a gas supply system must be leak tested prior to placing equipment in service. NEVER TEST FOR LEAKS WITH AN OPEN FLAME. Failure to comply could result in personal injury, property damage or death.

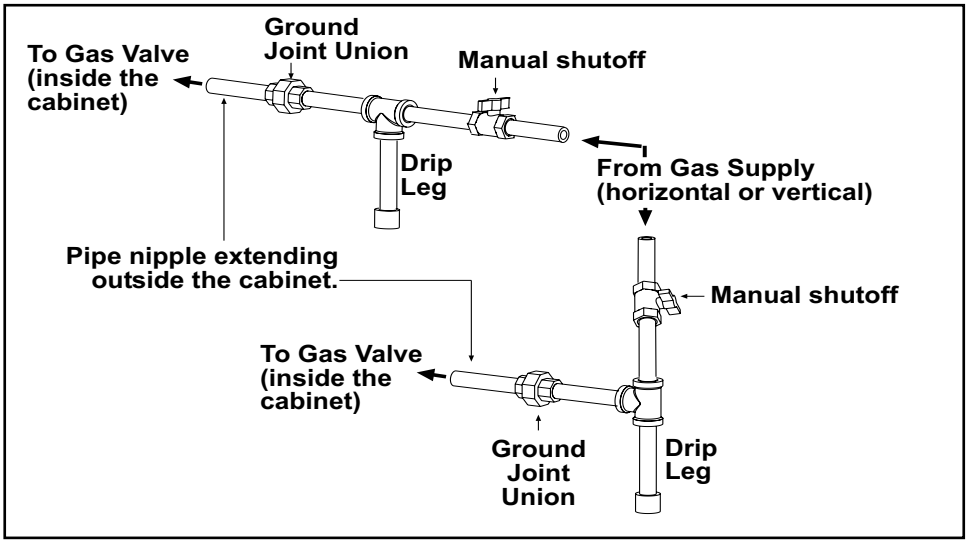

FIGURE 5 - Gas connection is at the pipe nipple that extends outside the cabinet

Illustration shows both a vertical and horizontal gas supply; requirements are the same.

7.0 Mechanical (cont'd)

7.1 Gas Piping and Pressure (cont'd)

NOTE: A gas conversion kit for changing from natural gas to propane is included with each heater. See Paragraph 7.1.4 for conversion instructions.

7.1.3 Valve Outlet or Orifice Pressure Setting

Measuring valve outlet gas pressure cannot be done until the heater is in operation. It is included in the steps of the "Check-Test-Start" procedure in Paragraph 11. The following warnings and instructions apply.

WARNING

Valve outlet gas pressure must never exceed 3.5" w.c. for natural gas and 10" w.c. for propane gas.

For Natural Gas: When the heater leaves the factory, the combination gas valve is set so that the valve outlet gas pressure for a single-stage valve is regulated to 3.5" w.c. Inlet supply pressure to the valve for natural gas must be a minimum of 5" w.c. or as noted on the rating plate and a maximum of 14" w.c.

For Propane: The heater is shipped factory equipped for use with natural gas. A propane conversion kit is included. Follow the instructions in Paragraph 7.1.4 to convert for use with propane.

At startup, measure the valve outlet pressure. Refer to the pressure chart on page 11 for correct outlet pressure.

When using propane, the inlet supply pressure to the valve must be a minimum of 11" w.c. and a maximum of 14" w.c.

Before attempting to measure or adjust valve outlet gas pressure, the inlet supply pressure *must* be within the specified range both when the heater is in operation and on standby. Incorrect inlet pressure could cause excessive valve outlet gas pressure immediately or at some future time. If natural gas supply pressure is too high, install a regulator in the supply line before it reaches the heater. If natural gas supply pressure is too low, contact your gas supplier.

Check Valve Outlet Pressure (can only be done after heater is operating)

NOTE: If operating at high altitude, outlet pressure requires adjustment. Follow instructions below.

Instructions

1) Locate the 1/8" output pressure tap on the valve (See **FIGURE 6**, page 11). With the manual valve turned off to prevent flow to the gas valve, connect a manometer to the 1/8" pipe outlet pressure tap in the valve. **NOTE:** A manometer (fluid-filled gauge) is recommended rather than a spring type gauge due to the difficulty of maintaining calibration of a spring type gauge.

2) Open the manual valve and operate the heater. Depress and hold the door safety switch. Cycle the burner once or twice to properly seat the adjustment spring in the valve. Measure the outlet pressure of the gas valve.

Normally when operating on natural gas at sea level, adjustments should not be necessary to the factory setting. (For high altitude settings, see next paragraph.)

If adjustment is necessary, remove the cap from the adjustment screw(s). Set pressure to correct settings by turning the regulator screw IN (clockwise) to increase pressure. Turn regulator screw OUT (counterclockwise) to decrease pressure.

CAUTION: DO NOT bottom out the gas valve regulator adjusting screw. This can result in unregulated manifold pressure causing excess overfire and heat exchanger failure.

Derate by Valve Outlet Pressure Adjustment for <u>High Altitude</u> Operation

Instructions for High Altitude Derate

1. Determine the required valve outlet pressure for the elevation where the heater will be operating. If unsure of the elevation, contact the local gas supplier.

Valve Outlet Pressure Settings by Elevation

NOTE: This adjustment can only be done after the heater is in operation. High altitude adjustment is included in the startup procedures.

Altitude		Natural Gas	Propane
Feet	Meters	inches w.c.	
Manifold Pressure Settings by Altitude for the UNITED STATES			
0-2000	0-610	3.5	10.0
2001-3000	611-915	3.1	8.8
3001-4000	916-1220	3.0	8.5
4001-5000	1221-1525	2.8	8.1
5001-6000	1526-1830	2.7	7.7
6001-7000	1831-2135	2.6	7.4
7001-8000	2136-2440	2.5	7.1
8001-9000	2441-2745	2.4	6.7
9001-10000	2746-3045	2.2	6.4
Manifold Pressure Settings by Altitude for CANADA			
0-2000	0-610	3.5	10.0
2001-4500	611-1373	2.8	8.1

2. Locate the 1/8” output pressure tap on the valve (See **FIGURE 6**). Turn the switch or knob on the top of the valve to “OFF”. Connect a manometer to the 1/8” pipe outlet pressure tap in the valve. Use a water column manometer that is readable to the nearest tenth of an inch.

FIGURE 6 - Top View of Valve showing Outlet Pressure Tap and Adjustment Locations

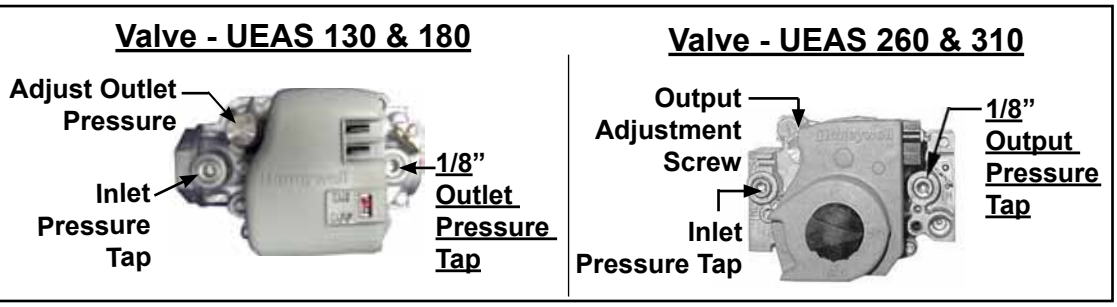

3. Turn the switch or knob on the top of the valve to “ON”. Remove the cap from the output pressure adjusting screw and adjust the gas train pressure to the pressure selected from the table above. Adjust pressure by turning the regulator screw IN (clockwise) to increase pressure or OUT (counterclockwise) to decrease pressure.

4. Turn up the thermostat. Depress and hold the door safety switch. Cycle the burner once or twice to properly seat the adjustment spring in the valve.

Re-check the pressure. When the outlet pressure is right for the installation, remove the manometer and replace the cap.

Check for leak at the pressure tap fitting.

5. With the heater operating determine that the inlet pressure to the heater for natural gas is between 5 and 13.5 inches w.c. and for propane between 10 and 13.5 inches w.c. Take this reading as close as possible to the heater (Heaters are equipped with gas valves that have an inlet pressure tap.) If the inlet pressure is not within the specified range, the inlet pressure must be corrected and Steps 3 and 4 repeated.

6. Find the High Altitude Adjustment label, P/N 197062, in the plastic bag with this installation manual. Using a permanent marker, fill-in the appropriate information from the tables below. Select a location for the label on the outside of the heater access panel so that it will be conspicuous to anyone operating or servicing the unit. Be sure the surface is clean and dry and adhere the label.

The input and/or the capacity of the heater changes with the derate. The tables below (page 12) list inputs and capacities at altitudes from sea level to 10,000 ft (3045M).

BTUH Inputs and Capacities by Altitude in the UNITED STATES for Model UEAS									
ALTITUDE		Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity
Feet	**Meters**	**Size 130**		**Size 180**		**Size 260**		**Size 310**	
0-2000	0-610	131,000	121,830	175,000	159,250	260,000	239,200	305,000	277,550
2001-3000	611-915	123,140	114,520	164,500	149,695	244,400	224,848	286,700	260,897
3001-4000	916-1220	120,520	112,084	161,000	146,510	239,200	220,064	280,600	255,346
4001-5000	1221-1525	117,900	109,647	157,500	143,325	234,000	215,280	274,500	249,795
5001-6000	1526-1830	115,280	107,210	154,000	140,140	228,800	210,496	268,400	244,244
6001-7000	1831-2135	112,660	104,774	150,500	136,955	223,600	205,712	262,300	238,693
7001-8000	2136-2440	110,040	102,337	147,000	133,770	218,400	200,928	256,200	233,142
8001-9000	2441-2745	107,420	99,901	143,500	130,585	213,200	196,144	250,100	227,591
9001-10000	2746-3045	104,800	97,464	140,000	127,400	208,000	191,360	244,000	222,040

BTUH Inputs and Capacities by Altitude in CANADA for Model UEAS									
ALTITUDE		Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity	Normal Input	Thermal Output Capacity
Feet	**Meters**	**Size 130**		**Size 180**		**Size 260**		**Size 310**	
0-2000	0-610	131,000	121,830	175,000	159,250	260,000	239,200	305,000	277,550
2001-4500	611-1373	117,900	109,647	157,500	143,325	234,000	215,280	274,500	249,795

7.1.4 Converting from Natural Gas to Propane

* The Serial No. is on the unit rating plate. The valve code "Z8" is identified in the sample serial number below:

BLC 79 **Z8** N 0000

Find the propane conversion parts in the plastic bag with this installation manual. Verify the components with the list below and follow the instructions to install.

Natural to Propane Conversion Kits	Size	**130**	**180**	**260**	**310**
	P/N	**261647**	**261648**	**221444**	**221445**
Components:					
Regulator Spring Kit		**260605**, M/H #396221		**98720**, M/H #393691	
*for Serial No. Valve Code		6E		Y3 or Z8	
Burner Orifice	P/N	**120145**	**221265**	**196902**	**196903**
	Size	3.3mm	#25	#14	#8
Conversion Tape		**64391**			
Propane Gas Disk		**37752**			
Regulated Propane Label		**79718**			

Conversion Instructions

1. Install the propane spring regulator kit in the gas valve. Follow the valve manufacturer's instructions that are included with the spring conversion kit.
2. Attach the propane disk near the gas valve.
3. Install the propane orifice. Refer to **FIGURE 28**, page 39, and locate the gas orifice. Carefully remove the natural gas orifice supplied on the heater. Install the propane orifice.
4. Fill in the information required on the gas conversion tape. Select a location near the rating plate. Be sure the surface is clean and dry and affix the conversion tape and propane label to the heater.
5. During heater startup, follow the instructions in Paragraph 7.1.3 to check the valve outlet pressure.

7.2 Venting and Combustion Air

All separated combustion units MUST BE equipped with both combustion air and exhaust piping to the outdoors. The unique concentric adapter box required with this heater allows for both combustion air and exhaust piping with only one horizontal or vertical penetration hole in the building.

Concentric horizontal and vertical vent/combustion air systems (Option CC6 or Option CC2) are the only venting/combustion air systems approved for high efficiency Model UEAS separated-combustion unit heaters.

Model UEAS units are certified as Category IV heaters. These heaters are very thermal efficient and will produce condensate during operation. The heater and its venting system must be connected to a drain. See Paragraph 7.3, page 26, for instructions on installing the condensate drain.

7.2.1 Vent/Combustion Air System Requirements

7.2.1.1 Types of Pipe

Provide field-supplied pipe in the types listed.

Vent Pipe - Schedule 40 PVC or CPVC pipe. In Canada, all PVC vent pipe must be approved to ULC 636.

Combustion Air Inlet Pipe - Sealed, single-wall galvanized pipe is recommended for the combustion air pipe.

7.2.1.2 Venter Outlet and Combustion Air Inlet

FIGURE 7 - Rear of a Model UEAS Heater showing the Locations of Both Inlet Air and Venter Outlet Connections

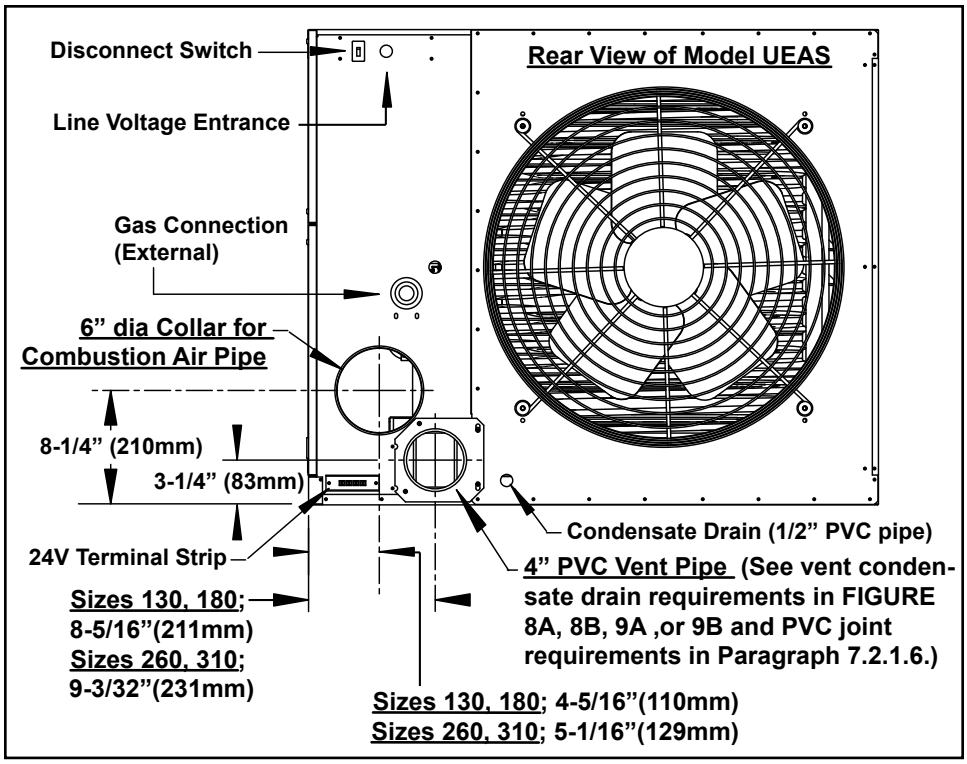

7.2.1.3 Vent Condensate Drain Connection

A condensate drain is required in the vent pipe. See **FIGURES 8A and 8B** for vertical vent or **FIGURES 9A and 9B** for horizontal vent run with either horizontal or vertical vent. For Canadian installation, refer to **FIGURE 8B or 9B** only. In Canada, all PVC vent pipe must be approved to ULC S636.

The 4" PVC cap with drain connection opening shown in **FIGURES 8A and 9A** is supplied with every heater. The drain connection, drain piping, and 4x4x4 PVC vent pipe tee are field supplied. All of the vent and drain components shown in **FIGURES 8B and 9B** are field supplied.

See Paragraph 7.2.1.6, page 15, for making vent pipe joints.

The vent pipe drain connects into the heater condensate drain. Refer to Paragraph 7.3, page 26, for condensate drain installation instructions.

FIGURE 8A - U.S. INSTALLATION ONLY - Vertical Vent showing Where to Install the Condensate Drain Connection using factory-provided 4" PVC Cap

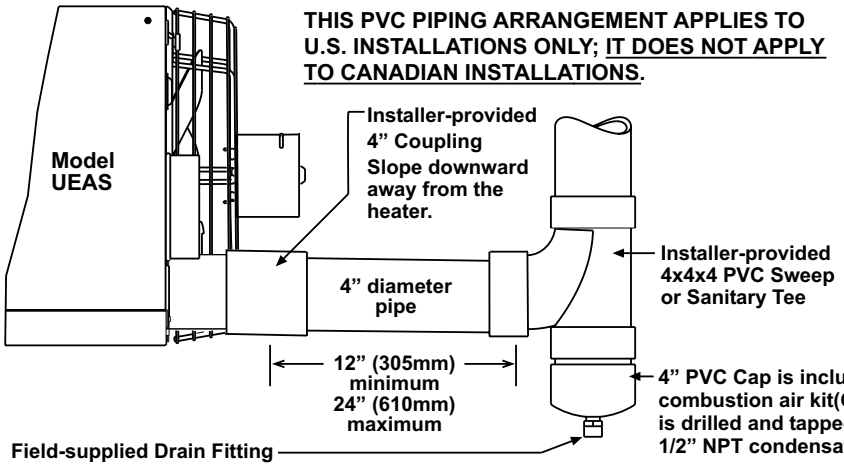

Both the vent condensate drain and the heat exchanger condensate drain require a trap and must go into a sanitary drain. (See Paragraph 7.3, page 26, for requirements on installing the condensate drain.) All drain parts except the 4" PVC cap shown here are field supplied.

FIGURE 8B - CANADIAN OR U.S. INSTALLATION Vertical Vent showing Where to Install the Condensate Drain Connection

THIS PVC PIPING ARRANGEMENT APPLIES TO ALL CANADIAN INSTALLATIONS. In Canada, all PVC vent pipe must be approved to ULC S636. All PVC venting and drain parts in this illustration are field supplied. This is an acceptable alternate PVC piping arrangement for installations in the United States.

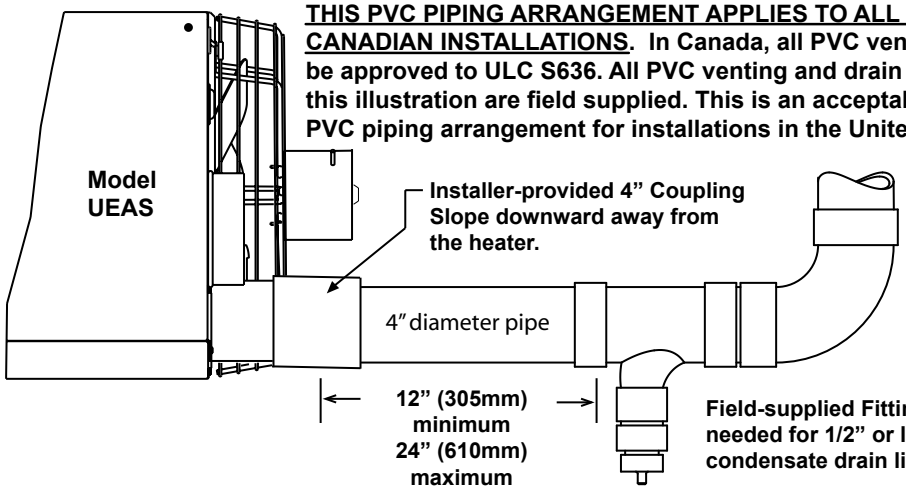

Both the vent condensate drain and the heat exchanger condensate drain require a trap and must go into a sanitary drain. (See Paragraph 7.3, page 26, for requirements on installing the condensate drain.) All vent and drain parts in this illustration are field supplied.

FIGURE 9A - U.S. INSTALLATION ONLY - Horizontal or Vertical Vent showing Where to Install the Condensate Drain Connection in the Horizontal Vent Run using factory-provided 4" PVC Cap

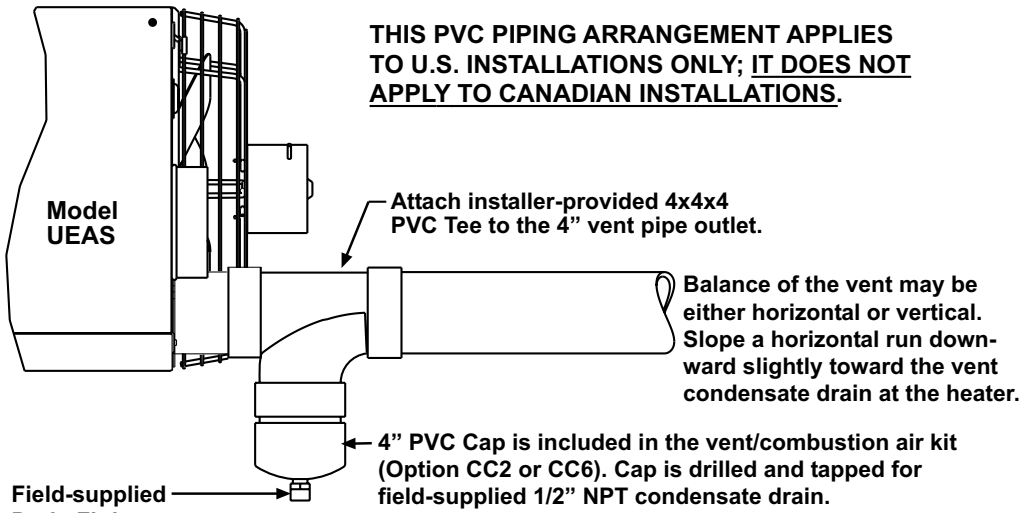

Both the vent condensate drain and the heat exchanger condensate drain require a trap and must go into a sanitary drain. (See Paragraph 7.3, page 26, for requirements on installing the condensate drain.) All drain parts except the 4" PVC cap shown here are field supplied.

FIGURE 9B - CANADIAN OR U.S. INSTALLATION Horizontal or Vertical Vent showing Where to Install the Condensate Drain Connection in the Horizontal Vent Run

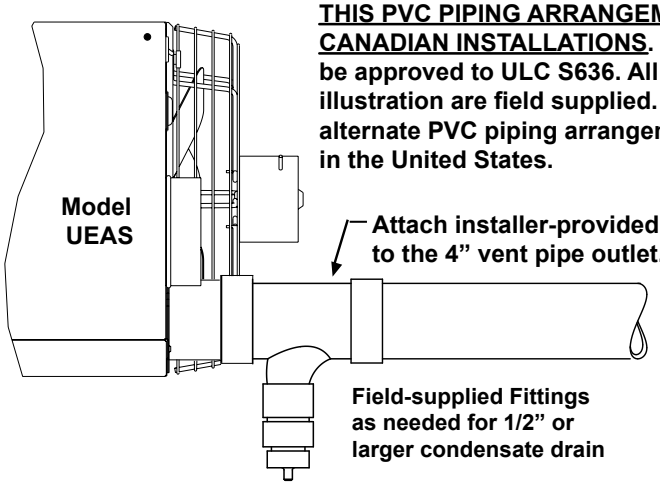

THIS PVC PIPING ARRANGEMENT APPLIES TO ALL CANADIAN INSTALLATIONS. In Canada, all PVC vent pipe must be approved to ULC S636. All venting and drain parts in this illustration are field supplied. This is an acceptable alternate PVC piping arrangement for installations in the United States.

Both the vent condensate drain and the heat exchanger condensate drain require a trap and must go into a sanitary drain. (See Paragraph 7.3, page 26, for requirements on installing the condensate drain.) All vent and drain parts in this illustration are field supplied.

7.2.1.4 Vent Pipe Diameter and Length

Vent Pipe Diameter and Maximum Vent Pipe Length from Heater to Terminal End for Vertical and Horizontal Vent

Model UEAS	Vent Pipe Diameter		Maximum Vent Pipe Length		Equivalent Straight Length for a			
					90° Sweep Elbow*		45° Elbow	
	inches	mm	feet	M	feet	M	feet	M
130, 180, 260, 310	4	102	50	15.2	8	2.4	4	1.2

* All 90° elbows in the vent system must be sweep type.

7.2.1.5 Combustion Air Pipe Diameter and Length

- Minimum length of pipe between the heater and the concentric adapter box is 3 ft (914mm). The minimum/maximum requirements of the length of vent pipe that extends outdoors are different for horizontal and vertical vent terminals. See instructions for Option CC2 or Option CC6.

Diameter and Length of the Combustion Air Inlet Pipe

Model UEAS 130, 180, 260, 310	Diameter	Length
Section From Heater to Concentric Adapter Box	6" (152mm)	Same as Vent Pipe
Section From Concentric Adapter Box to Outdoors	8" (203mm)	See Instructions for Option CC2, pages 22-25, or CC6, pages 19-22.

7.2.1.6 Joints

Provide pipes and fittings in type specified in Paragraph 7.2.1.1, page 13. **When ready to install the vent system, follow the instructions below to make joints.**

Combustion Air Pipe

Secure slip-fit joints of single-wall combustion air pipe with sheetmetal screws or rivets. Seal joints and seams with aluminium tape or silicone sealant.

Vent Pipe

The Schedule 40 PVC or CPVC vent system should be installed in a manner consistent with normal industry standards and in compliance with all local fire and building code requirements. Failure to follow proper installation practices, procedures, or techniques can result in system failure, property damage, or personal injury. The installer is responsible for the installation. Read all of the procedures below before beginning installation. Make joints one at a time as pipe and fitting should be assembled quickly while cement is fluid.

1. **Cut the pipe square.** An angled cut may result in joint failure.

Remove burrs using a deburring tool, a file, or a knife edge. Remove all burrs from the inside and outside diameter of the cut end of the pipe. Chamfer (bevel) the end of the pipe 10° to 15°.

b) Use a clean dry cloth to remove surface dirt, grease, and moisture from the pipe sections and fittings.

7.0 Mechanical (cont'd)

7.2 Venting and Combustion Air (cont'd)

7.2.1 Vent/Combustion Air System Requirements (cont'd)

7.2.1.6 Joints (cont'd)

2. Check for Proper Fit

With light pressure, test the fit. A dry pipe should go one-half to one-third of the way into the fitting hub. Do not use pipe or fittings that are too tight or too loose.

3. Primer, Cement, and Applicator Requirements

a) Primer for joints should conform to ASTM F 656.
b) Cement for joints should conform to ASTM D 2564.
c) Use a 2-3" applicator brush for the 4" pipe and fittings.

4. Applying Primer and Cement (NOTE: Make joints one at a time as pipe and fitting should be assembled quickly while cement is fluid.)

a) Apply primer to pipe and fitting surfaces. Do not allow primer to puddle inside the system.
b) Apply a first coat of cement on the pipe O.D. Apply a full even layer of cement for a distance slightly greater than the depth of the socket of the coupler (fitting).
c) Coat the coupler (fitting) socket with a medium layer of cement, avoiding puddling inside the system.
d) Apply a second full even layer of cement on the pipe O.D.

5. Join Pipe and Coupler (fitting)

Assemble pieces quickly while cement is fluid. Insert the pipe into the coupler (fitting) until it touches the socket bottom. Turn the pipe a quarter turn. Hold the joint together until the pipe will not pull out.

Clean excessive cement from the exterior. A properly made joint will have a continuous bead of cement around the perimeter.

7.2.1.7 Support

Vent Pipe Support - For continued safe operation, the vent system must be properly supported. A ten-foot (3M) length of PVC pipe weighs 20 pounds (9kg) and has an expansion rate of four times that of metal pipe.

Horizontal CPVC or PVC vent must be supported every six feet (1.8M). The hangers should provide as much bearing surface as possible and must be free of sharp edges and burrs. Hangers must allow the pipe to expand laterally. Consider pipe expansion when placing hangers. Changes in pipe direction will allow for expansion. Hangers must be placed to allow for some direction movement. The slip joint at the concentric adapter is designed to permit some limited expansion. DO NOT USE THE HEATER OR CONCENTRIC ADAPTER BOX TO PROVIDE VENT PIPE SUPPORT.

For a vertical CPVC or PVC vent, it is recommended that an engineer design the vertical support system. An acceptable support for a simple vertical vent that is 30 feet (9.1M) or less and rises closely from the heater is illustrated in **FIGURE 10**. DO NOT USE THE HEATER OR CONCENTRIC ADAPTER TO PROVIDE VENT PIPE SUPPORT.

FIGURE 10 - To allow for expansion, use a field-supplied cradle-type vent pipe support

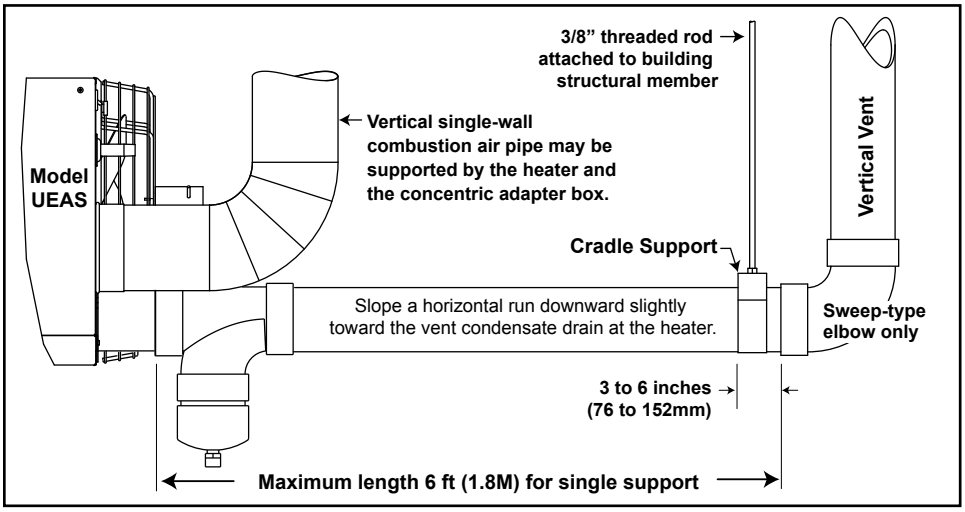

Combustion Air Pipe Support - Support a single-wall metal horizontal combustion air run every six feet (1.8M). Support a vertical single-wall metal combustion air pipe in accordance with accepted industry practices. The heater and concentric adapter box may be used to support a vertical combustion air pipe.

7.2.1.8 Vent Pipe Clearance

Vent Pipe - Do not install the vent piping near any high temperature steam lines, radiant heaters, or other sources of heat.

7.2.1.9 Concentric Adapter Box

All Model UEAS installations require a concentric adapter box as illustrated in **FIGURES 11, 12, 13, and 14**. The concentric adapter box is included in both the horizontal and vertical vent/combustion air kits. Installation is included in the Option CC6 and Option CC2 instructions.

FIGURE 11 - A Concentric Adapter Box is a Required Part of all Model UEAS Installations

A vent/combustion air kit which includes the concentric adapter box is ordered with the heater. A horizontal terminal vent/combustion air kit is Option CC6; a vertical terminal vent/combustion air kit is Option CC2.

Heater Side View of the Concentric Adapter Box

FIGURE 12 - Concentric Adapter Box Dimensions

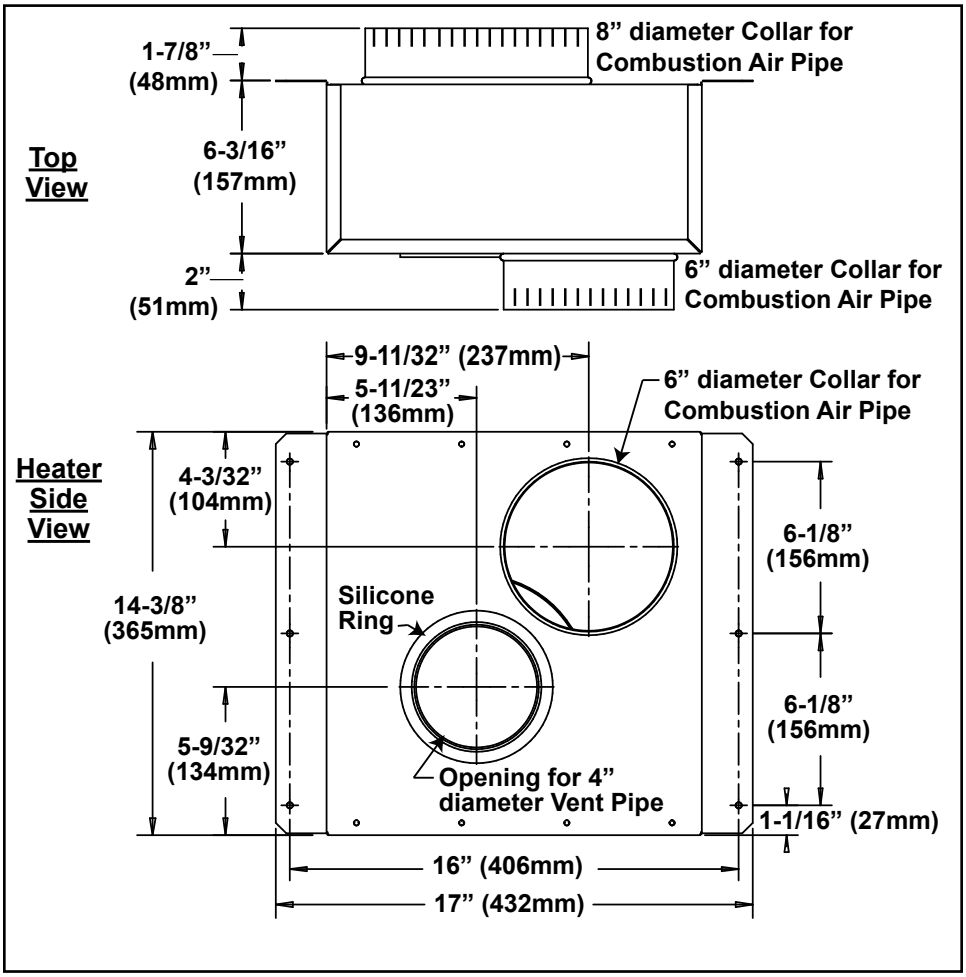

FIGURE 13 - Concentric Adapter Box Airflow

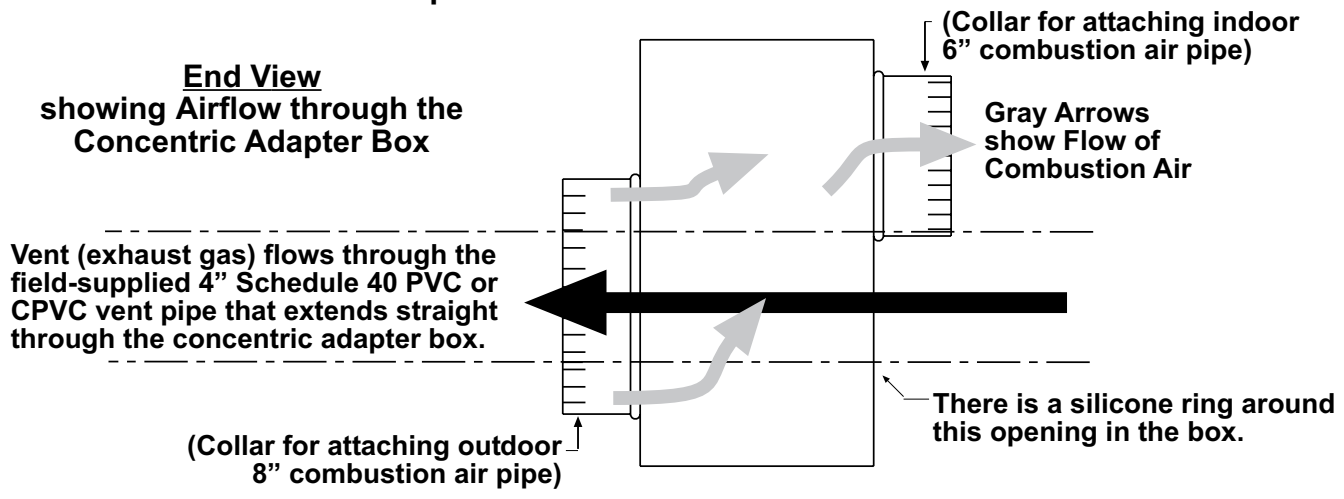

FIGURE 14 - Concentric Adapter Box Connections

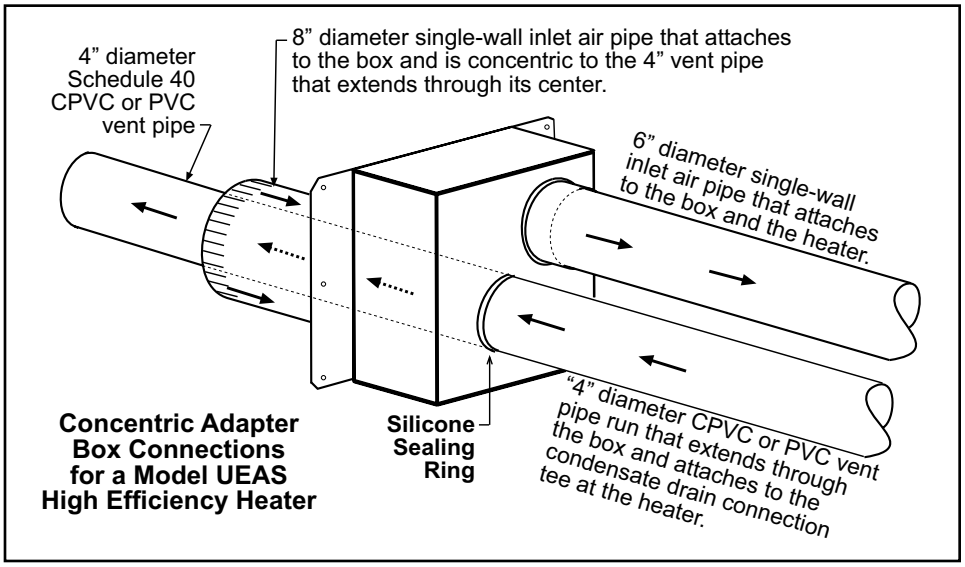

HORIZONTAL OR VERTICAL VENT TERMINAL?

FIGURE 15 - Is the Separated-Combustion Vent/ Combustion Air System Horizontal or Vertical?

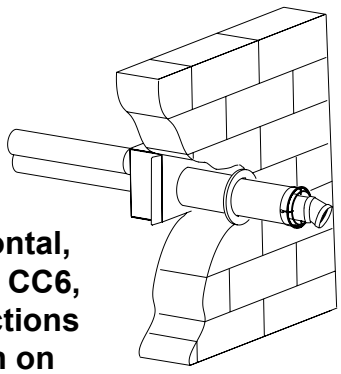

Horizontal, Option CC6, instructions begin on page 19.

Vertical, Option CC2, instructions begin on page 22.

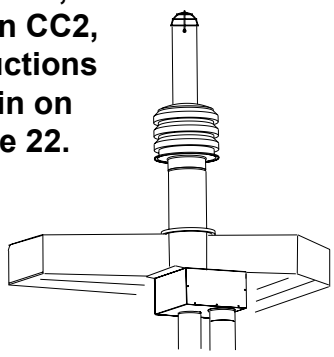

7.2.2 HORIZONTAL VENT TERMINAL Installation - Option CC6

Components Required - Factory and Field

Parts in the Horizontal Vent/Combustion Air Terminal Package (Option CC6)

Complete Horizontal Vent/Combustion Air Terminal Kit (Same as Option CC6), P/N 221247		
Qty	**P/N**	**Description**
1	**221069**	Concentric Adapter Box with Silicone Sealing Ring (See **Paragraph 7.2.1.9**, pages 17-18.)
1	**221089**	Bird Screen for Exhaust Outlet
1	**124940**	Ring Guard for Air Inlet 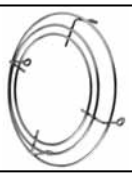
4	**37661**	#10-16x1/2" lg Screws to attach the inlet air guard
4	**221186**	Spacers for inlet air guard
1	**221091**	4" PVC Cap for Vent Condensate Drain Connection (See **FIGURE 8A and 9A** on page 14.)

Field-supplied requirements:

- Vent pipes and fittings as illustrated in **FIGURE 8A, 8B, 9A or 9B** on pages 14 and 15 and an elbow (22.5° elbow if available) as shown in **FIGURE 16**, page 21
- Combustion air pipes (6” and 8” single-wall galvanized pipe)
- Flashing
- Sheetmetal screws, tape, primer, cement, and sealant as required

Before beginning, verify that the kit is at the site and that all components are correct for the installation. Be sure all required field-supplied parts are available.

Installation Instructions for Horizontal Vent/ Combustion Air Kit Option CC6
(in compliance with requirements on pages 13-18)

1. Determine the location on the outside wall for the vent/combustion air terminal. Location must comply with vent length requirement in Paragraph 7.2.1.4 on page 15. Also, read the “Hazards of Chlorine” on page 5 concerning location of the combustion air inlet.

In most applications, the terminal will be on approximately the same level as the heater. Allow for 1/4” per foot (6mm per 305mm) **downward pitch of the vent pipe from the concentric adapter toward the heater** for condensate to drain. Minimum clearances for the horizontal vent terminal are shown in the table on page 20. Avoid positioning the vent terminal above a walkway as there may be a small amount of condensate that drips from the end of the vent/combustion air terminal. In cold climates, the condensate may form icicles. Also, select a location that complies with adjoining building clearances as shown in **FIGURE 16**, page 21.

Products of combustion can cause discoloring of some building finishes and deterioration of masonry materials. Applying a clear silicone sealant that is normally used to protect concrete driveways can protect masonry materials. If discoloration is an esthetic problem, re-locate the vent or install a vertical vent.

WARNING

All vent terminals must be positioned or located away from fresh air intakes, doors and windows to preclude combustion products from entering occupied space. Failure to comply could result in severe personal injury or death and/or property damage.

WARNING

In climates with below freezing temperatures, condensate may form icicles on the vent terminal. Locate the terminal where a falling icicle would not be a hazard.

7.0 Mechanical (cont'd)

7.2 Venting and Combustion Air (cont'd)

7.2.2 HORIZONTAL VENT TERMINAL Installation - Option CC6 (cont'd)

Clearances to Horizontal Vent Terminal

Structure	Minimum Clearances for Vent Terminal Location (all directions unless specified)
Forced air inlet within 10 ft (3.1M)*	3 ft (0.9M) above
Combustion air inlet of another appliance	6 ft (1.8M)
Door, window, or gravity air inlet (any building opening)	4 ft (1.2M) horizontally
	4 ft (1.2M) below
	1 ft (305mm) above
Electric meter, gas meter ** and relief equipment	U.S. - 4 ft (1.2M) horizontally
	Canada - 6 ft (1.8M)
Gas regulator **	3 ft (0.9M) horizontally
Adjoining building or parapet	6 ft (1.8M)
Adjacent public walkways	7 ft (2.1M) above
Grade (ground level)	3 ft (0.9M) above***
*Does not apply to the inlet of a direct vent appliance. **Do not terminate the vent directly above a gas meter or service regulator. *** Consider local snow depth conditions. The vent must be at least 6" (152mm) higher than anticipated snow depth.	

2. Install the vent pipe and combustion air pipe runs (from the heater to near the location selected through the wall).

- Use the type of pipe specified in Paragraph 7.2.1.1, page 13.
- Comply with the requirements in Paragraph 7.2.1.2 and 7.2.1.3, pages 13-14, when attaching pipes to the heater and installing the condensate drain connection in the vent.
- Overall vent length must comply with the table in Paragraph 7.2.1.4, page 15.
- Make all joints according to the instructions in Paragraph 7.2.1.6, pages 15-16. Extend the runs close to the wall location selected in Step 1 above. Provide 1/4" per foot (6mm per 305mm) downward pitch of the vent pipe toward the heater for condensate to drain (**NOTE**: The vent pipe will extend through the wall after the concentric adapter box is installed. The indoor combustion air pipe will end at the concentric adapter box.)
- Support pipes as required in Paragraph 7.2.1.7, page 17.

3. Prepare a 9" diameter clearance hole through the outside wall for the 8" diameter combustion air pipe.

Outside wall construction thickness should be 1" (25mm) minimum and 48" (1219mm) maximum. Position the box against the wall. Being sure that the location and box orientation are correct, mark the location where the combustion air pipe will extend through the wall. Cut a 9" diameter hole so that the 8" pipe will be centered through the 9" opening.

4. Prepare the concentric adapter box.

4a) Determine the length of the 8" diameter combustion air pipe and attach it to the box.

Comply with the requirements in **FIGURE 16**. Determine the length of the pipe by measuring the wall thickness, ***plus*** 4 to 16" (102-406 mm) beyond the wall, ***minus*** the width of the pipe crimp which will be cut off.

So that the 8" inlet air guard will fit properly, cut the crimp off the end of the combustion air pipe. Turn the combustion air pipe so that the seam will be toward the top side of the box and slide it on the collar. Attach the combustion air pipe to the collar with sheetmetal screws. Seal the joint and seam with sealant or tape.

4b) Drill a drain hole. On the bottom side of the pipe, mark a location that will be outside between the end of pipe and the building (about 2/3 of the distance from the end of the pipe to the edge of the building) when the box is installed. Drill a 1/2" diameter drain hole in the pipe at that location.

4c) Attach the inlet air guard. Position the inlet air ring guard over the end of the combustion air pipe. See **FIGURE 16.** Attach the guard to the inlet air pipe with the four 1/2" long screws provided.

FIGURE 16 - Typical Installation of a Model UEAS High Efficiency, Separated-Combustion Unit with a Horizontal Vent/Combustion Air Terminal (Option CC6)

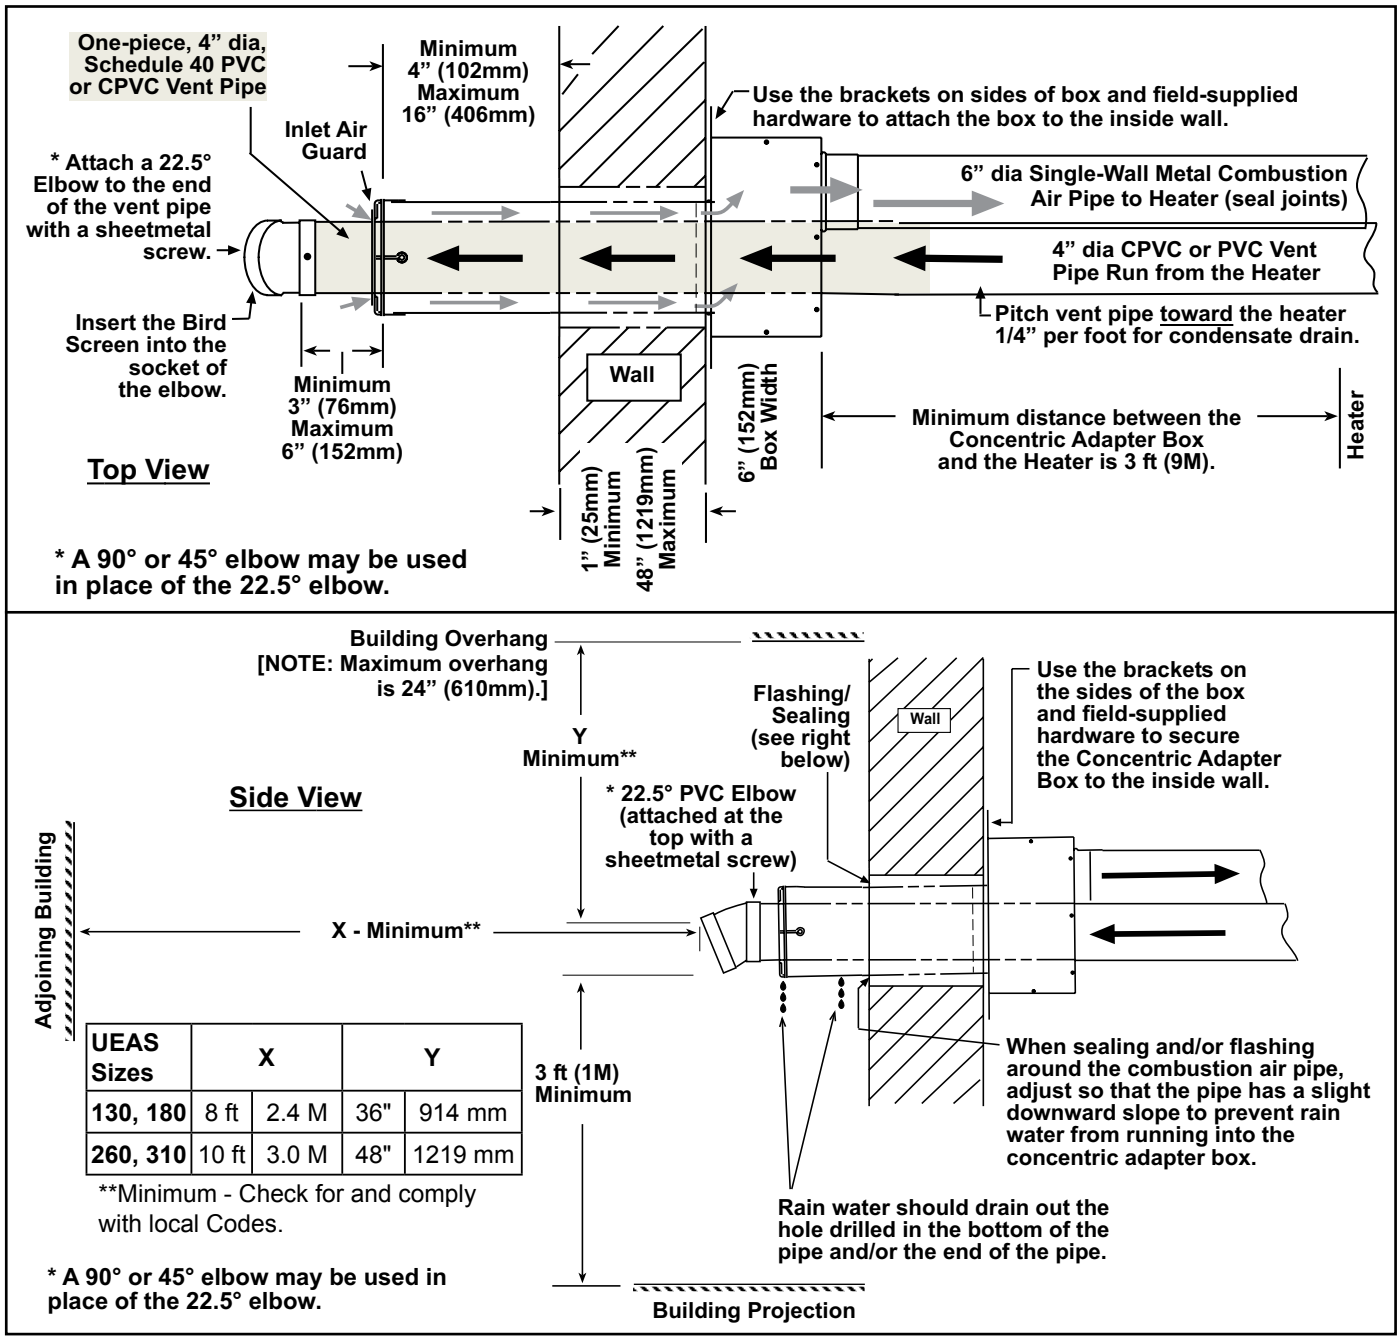

UEAS Sizes	X		Y	
130, 180	8 ft	2.4 M	36"	914 mm
260, 310	10 ft	3.0 M	48"	1219 mm

5. Attach the concentric adapter box to the wall.

Insert the combustion air pipe with inlet guard attached out through the wall. Position the box so that the pipe is centered in the opening. Attach the brackets to the wall with field-supplied hardware.

6. Determine length and install the "terminal-end" vent pipe.

6a) Determine length of pipe. The length of the continuous piece of terminal-end vent pipe is determined by the installation within the maximum and minimum requirements. See **FIGURE 16** to determine lengths of each segment and calculate the total length required. The "terminal-end" vent pipe extending through the box and concentric through the inlet air pipe must be one piece of vent pipe without joints.

6b) Drill a hole to attach the elbow at the end and install the pipe. Being sure the vent pipe is in the proper flow direction, temporarily fit the elbow on the exhaust end of the vent pipe. For easier future service, the elbow is being attached using one field-provided 3/4" long sheetmetal screw. Using a drill that is

7.0 Mechanical (cont'd)

7.2 Venting and Combustion Air (cont'd)

7.2.2 HORIZONTAL VENT TERMINAL Installation - Option CC6 (cont'd)

a size smaller than the 3/4" long sheetmetal screw, with the elbow pointing down, drill a pilot hole through the top center of the elbow socket and the vent pipe.

Remove the elbow. In the elbow only, enlarge the drilled hole to 7/32". The elbow will be attached from the outside in Step 8b).

With the pipe turned so that the drilled hole is at the top, slide the end of the vent pipe out through the box and the combustion air pipe. Position the vent pipe so that it will extend between 3" (76mm) and 6" (152mm) past the end of the combustion air pipe. Adjust the pipe so that the screw hole is in the top center. Verify that the silicone sealing ring on the box is properly seated. **Do not add sealant to the ring**.

Join the "terminal end" vent pipe to the vent pipe run. Re-check the silicone ring to be sure that it is still properly seated.

7. Attach the indoor portion of the combustion air pipe. Use sheetmetal screws to attach the single-wall combustion air pipe run to the collar on the concentric adapter box. Seal with tape or sealant.

8. On the outside, install the inlet air guard spacers, attach the elbow, install the bird screen, and seal or flash around the combustion air pipe.

8a) Remove the screws holding the inlet air guard (installed in Step 4c). Slide the spacers onto the ends of the four spokes that support the vent pipe. Re-attach the guard.

8b) Slide the elbow over the end of the vent pipe and attach it with the field-provided 3/4" long sheetmetal screw. Slide the bird screen into the socket on the open end of the elbow. The elbow must be pointing down.

8c) Seal around the combustion air pipe with an outdoor caulking material or a masonry cement or a combination of flashing and caulking. Adjust the sealant and the pipe so that the metal pipe will have a slight downward slope to the outside. The downward slope and the 1/2" drain hole (Step 4b) will prevent rain water from running through the pipe into the concentric adapter box.

Installation of the horizontal vent and combustion air system on your separated-combustion unit is complete. Verify compliance with all venting installation requirements, pages 13-18, and **FIGURE 16**.

7.2.3 VERTICAL VENT TERMINAL Installation - Option CC2

Parts in the Vertical Vent Terminal/Combustion Air Package (Option CC2)

Components Required - Factory and Field

Complete Vertical Vent/Combustion Air Kit (Same as Option CC2), P/N 221248		
Qty	**P/N**	**Description**
1	**221069**	Concentric Adapter Box with Silicone Sealing Ring (See **Paragraph 7.2.1.9**, pages 17-18.)
1	**221215**	Bird Guard 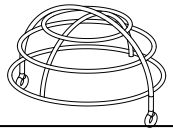
2	**37661**	Screws for Bird Guard. #10x1/2" self-drilling
1	**221250**	Combustion Air Inlet
1	**221185**	Rain Collar
1	**221091**	4" PVC Cap for Vent Condensate Drain Connection (See **FIGURE 8A and 9A** on page 14.)

Field-supplied requirements:

- Vent pipes and fittings as illustrated in **FIGURE 8A, 8B, 9A or 9B** on pages 14 and 15
- Combustion air pipes (6” and 8” single-wall galvanized pipe)
- Flashing
- Sheetmetal screws, tape, primer, cement, and sealant as required

Before beginning, verify that the kit is at the site and that all components are correct for the installation. Be sure all required field-supplied parts are available.

Installation Instructions for Vertical Vent/ Combustion Air Kit Option CC2

(in compliance with requirements on pages 13-18)

1. Determine the location of the vent terminal.

Select a location away from fresh air intakes, allowing space for the concentric adapter box inside. Vent terminal must be located from adjacent buildings as shown in **FIGURE 20**, page 25.

WARNING

All vent terminals must be positioned or located away from fresh air intakes, doors and windows to preclude combustion products from entering occupied space. Failure to comply could result in severe personal injury or death and/or property damage.

If more than one vertical concentric vent/combustion air terminal (Option CC2) is being installed, the minimum spacing between vent centerlines is determined by the minimum outdoor design temperature (most extreme outdoor condition at the installation site).

Minimum Vent Terminal Spacing when Installing more than one Heater

Minimum Outdoor Design Temperature		Minimum Spacing between Centerlines of Vent Pipes in Vertical Combustion Air/Vent Terminals (Option CC2)	
°F	°C	inches	mm
31 or warmer	0 or warmer	36	914
-10 to 30	-23 to -1	60	1524
less than -10	less than -23	84	2134

2. Install the Vent Pipe and Combustion Air Pipe Runs (from the heater to near the location selected through the roof).

- Use the type of pipe specified in Paragraph 7.2.1.1, page 13.
- Comply with requirements in Paragraph 7.2.1.2 and 7.2.1.3, pages 13-14, when attaching pipes to the heater when installing the condensate drain connection.
- Overall vent length must comply with table in Paragraph 7.2.1.4, page 15.
- Make all joints according to the instructions in Paragraph 7.2.1.6, page 15-16. Extend the runs close to the roof location selected in Step 1 above. (NOTE: The vent pipe will extend through the roof after the concentric adapter box is installed. The indoor combustion air pipe will end at the box.)
- Support pipes as required in Paragraph 7.2.1.7, pages 16-17.

3. Cut a clearance hole through the roof for the 8” diameter combustion air pipe.

Position the concentric adapter box against the inside of the roof. Being sure that the location and orientation of the box are correct, mark and cut the hole for the 8” combustion air pipe.

4. Attach the combustion air pipe to the concentric adapter box.

4a) Determine the length of the 8” outdoor combustion air pipe so that dimension ”X” in **FIGURE 17** is equal to the roof thickness plus anticipated snow depth, but does not exceed 48” (1219mm) or have less than 18” (457mm) of pipe above the roof.

4b) Attach the combustion air pipe to the collar of the concentric adapter box with sheetmetal screws. Seal joint and seam with tape or sealant.

5. Attach the concentric adapter box to the underside of the roof.

(Hardware and flashing are field supplied.) On the inside, insert the combustion air pipe up through the opening, position the box to match the pipe runs, and attach the brackets to the roof.

7.0 Mechanical (cont'd)

7.2 Venting and Combustion Air (cont'd)

7.2.3 VERTICAL VENT TERMINAL Installation - Option CC2 (cont'd)

6. Determine the length and install the "terminal end" vent pipe.

6a) Refer to **FIGURE 17** and determine the required length of the continuous section of vent pipe. The length of the vent pipe extending through the box, through the combustion air inlet pipe, and the height required above the combustion air inlet air pipe must be one piece of pipe without joints.

Determine the length by adding the requirements:

Starting with at least 6" (152mm) below the box for attaching to the coupler;

plus 6" (152mm) through the concentric adapter box;

plus the length of the combustion air pipe;

plus a **minimum** of 23" (584mm) beyond the top of the combustion air pipe.

Total is the **minimum length** of the vent pipe section.

NOTE: A longer vent pipe may be required; see FIGURE 17.

6b) Install the "terminal end" vent pipe.

Being sure the pipe is in the proper flow direction, slide the end into the box and out through the combustion air pipe. Position the pipe so that it extends beyond the combustion air pipe the height determined in **6a)** above. Verify that the silicone ring is seated properly.

Join the terminal vent pipe to the vent pipe run. Re-check the silicone ring to be sure that it is still properly seated.

FIGURE 17 - Concentric Adapter, Outdoor Combustion Air Pipe, and Concentric Vent Pipe

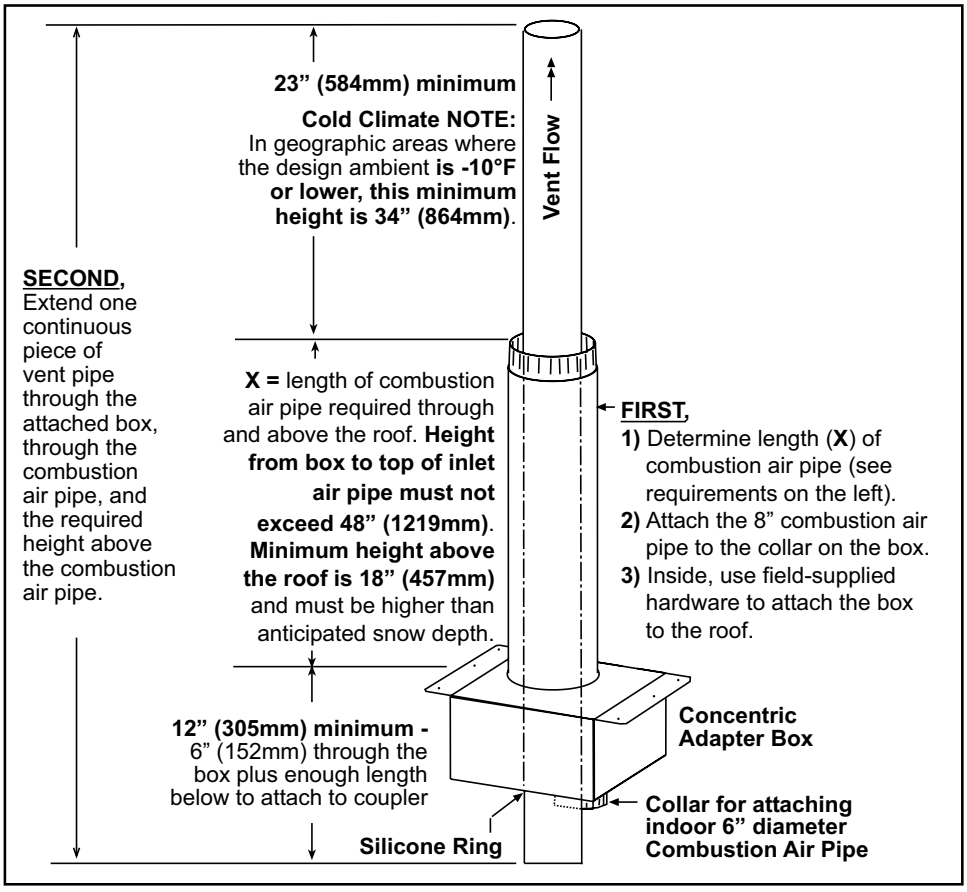

FIGURE 18 - Outside View of Combustion Air Pipe with Box Attached to Under Side of Roof

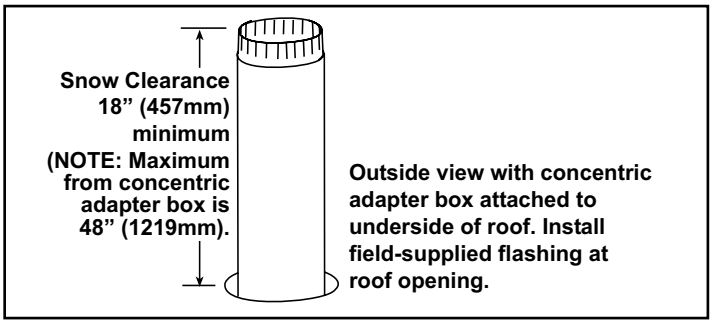

7. Attach the indoor combustion air pipe. Use field-supplied sheetmetal screws to attach the single-wall combustion air pipe run to the collar on the concentric adapter box. Seal with tape or sealant.

8. On the outside, install the combustion air inlet, the rain collar, the bird screen, and field-supplied flashing.

8a) Slide the combustion air inlet over the vent pipe and fasten the collar to the combustion air pipe with sheetmetal screws. Seal the joint with tape or sealant. See **FIGURE 19**.

8b) To prevent rain water leakage, slide the rain collar over the end of the 4" vent pipe and seat it flush on the top of combustion air inlet. **Do not** use sealant.

8c) Attach the bird guard with the two sheetmetal screws provided (See **FIGURE 19**.

8d) On the outside (See **FIGURE 18**), flash the combustion air pipe to the roof. Flashing is field-supplied.

Installation of the vertical vent and combustion air system on your separated-combustion unit is complete. Verify compliance with all venting installation requirements, pages 13-18, and **FIGURE 20**.

FIGURE 19 - Install Combustion Air Inlet, Rain Collar, and Bird Screen

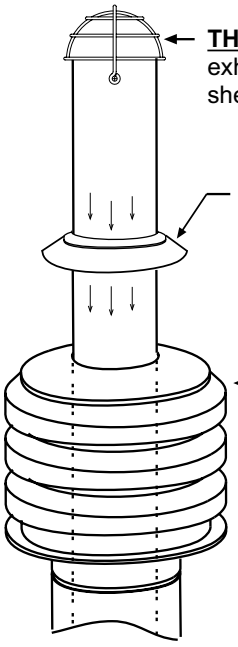

THIRD, Attach the bird guard on the exhaust (vent) terminal with the sheetmetal screws provided.

SECOND, Slide the rubber rain cover down over the end of the 4" vent pipe until it is seated flush on the top of the combustion air inlet. **Do not seal** with silicone or tape.

FIRST, Install the Combustion Air Inlet.
1) Slide the combustion air inlet down over the vent pipe.
2) Fasten bottom of inlet to the combustion air pipe with sheetmetal screws. Be sure not to penetrate the vent pipe.

FIGURE 20 - Typical Installation of a Model UEAS High Efficiency, Separated-Combustion Unit with a Vertical Vent/Combustion Air Terminal (Option CC2)

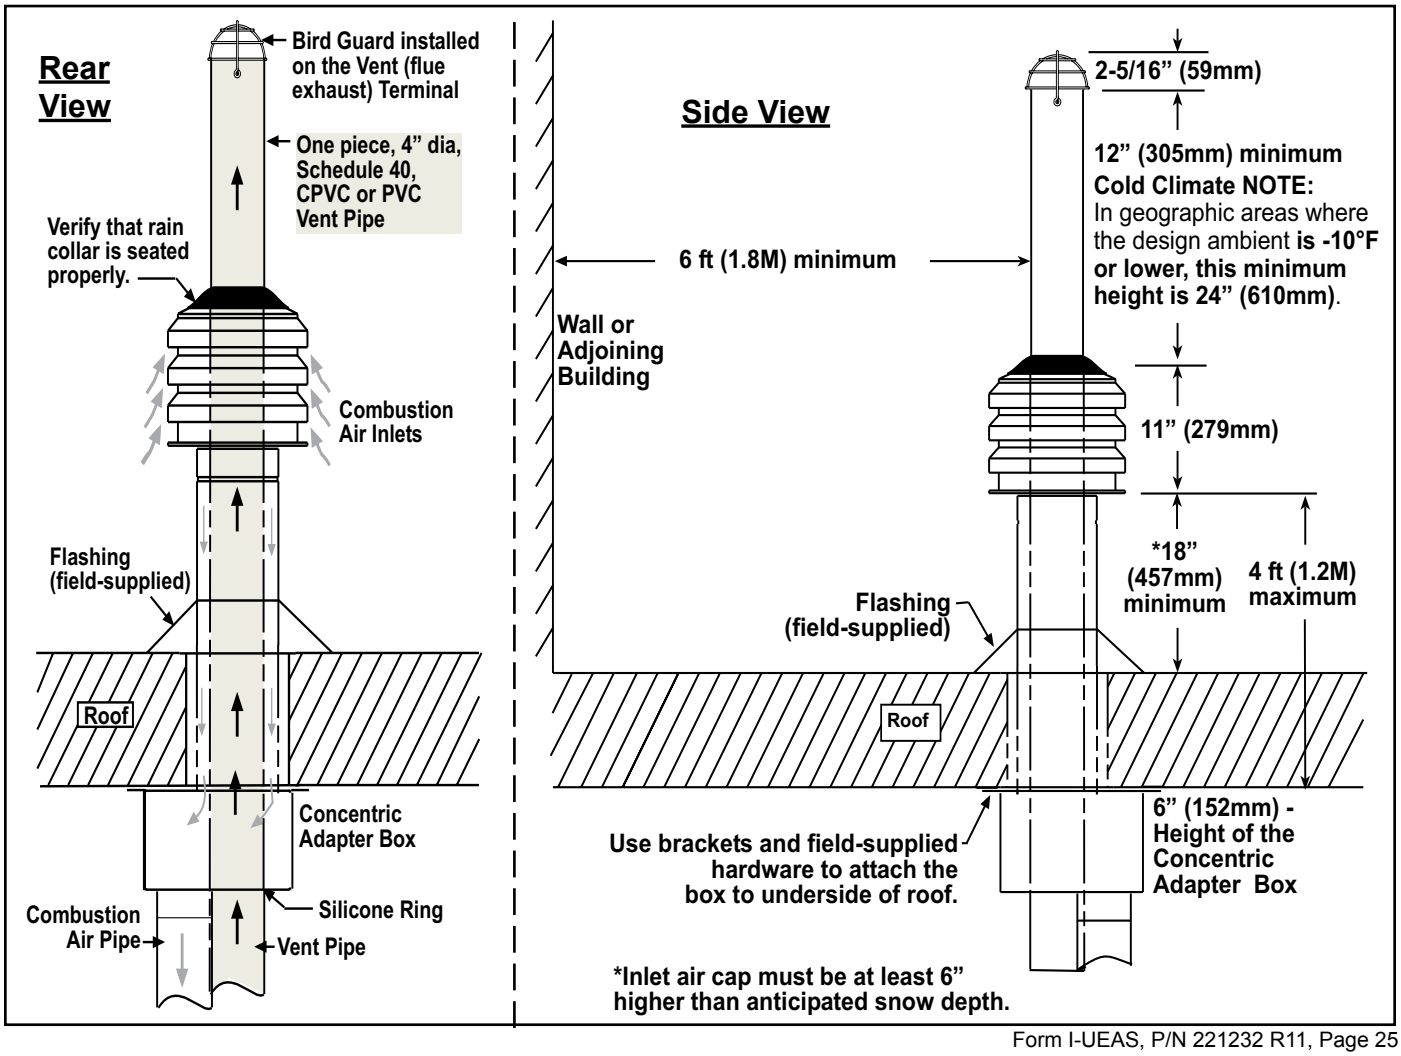

7.0 Mechanical (cont'd)

7.3 Condensate Drain System

The installer must provide a condensate drain system. A 4" PVC cleanout cap (**FIGURE 22**) that is drilled and tapped for a 1/2" NPT fitting is furnished with the heater for the vent drain. All other material must be field supplied.

During operation, condensate is both produced in the heater and collected from the venting system. Therefore, the installation requires a condensate drain from the secondary heat exchanger (**FIGURE 21**) and a condensate drain from the vent pipe (**FIGURE 22**).

CAUTION: Apply general plumbing practices if pipe insulation or heat tapes are required to prevent freezing of the condensate drain system.

For safe performance of the heater, each condensate drain must include a trap as shown in **FIGURES 21 and 22**.

Downstream from the traps the condensate drains may be joined and both must be connected to a sanitary drain within the building. Check codes to be certain that this is permitted. (Condensate from the heater has a ph of 6 and is not harmful to a sanitary drain. **NOTE:** Actual ph may vary ± 1 depending upon fuel and combustion air.) Model UEAS Sizes 130 and 180 will produce approximately one gallon (4 liters) of condensate per hour. Sizes 260 and 310 will produce approximately two gallons (8 liters) of condensate per hour.

A condensate disposal system that relies on gravity should be satisfactory for most installations since unit heaters are normally installed several feet above the floor. If a gravity system is not possible, a condensate pump may be installed. There are a number of commercially available pumps made for this purpose. If using a condensate pump, follow the pump manufacturer's installation recommendations.

Condensate Drain Traps

Two condensate drain traps are required.

- **FIGURE 21** illustrates the trap in the drain attached to the heater and lists the minimum required leg dimensions for that trap.
- **FIGURE 22** illustrates the vent pipe drain trap and lists the required length difference for the trap legs.

The most important part of fabricating and assembling the traps is the length of the individual legs of the traps. If the difference in the lengths of the legs of the traps are not as illustrated, it could prevent proper drainage of the condensate and possibly permit vent gas to enter the building. (The length difference is also what provides a "water seal" that prevents leakage of vent gas into the sanitary drain.) The two traps may be drained into a common pipe that is connected to the sanitary drain.

The orientation of the piping is not critical and may be arranged to suit the installation. Unions are recommended to permit maintenance of the drains and to facilitate service of the heater. A union is shown in both of the traps and a third union is recommended in the drain pipe. If pipe insulation or heat tapes are required to prevent freezing, use should be in accordance with general accepted plumbing practices.

FIGURE 21 - Secondary Heat Exchanger Condensate Drain Trap

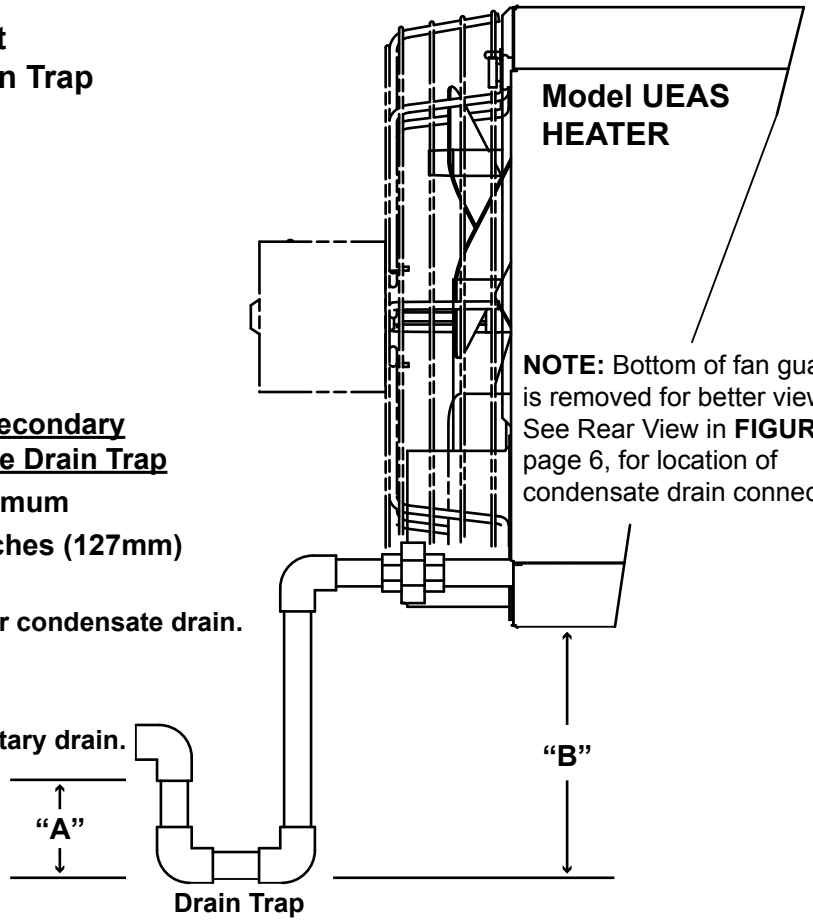

FIGURE 22 - Vent Pipe Condensate Drain Trap

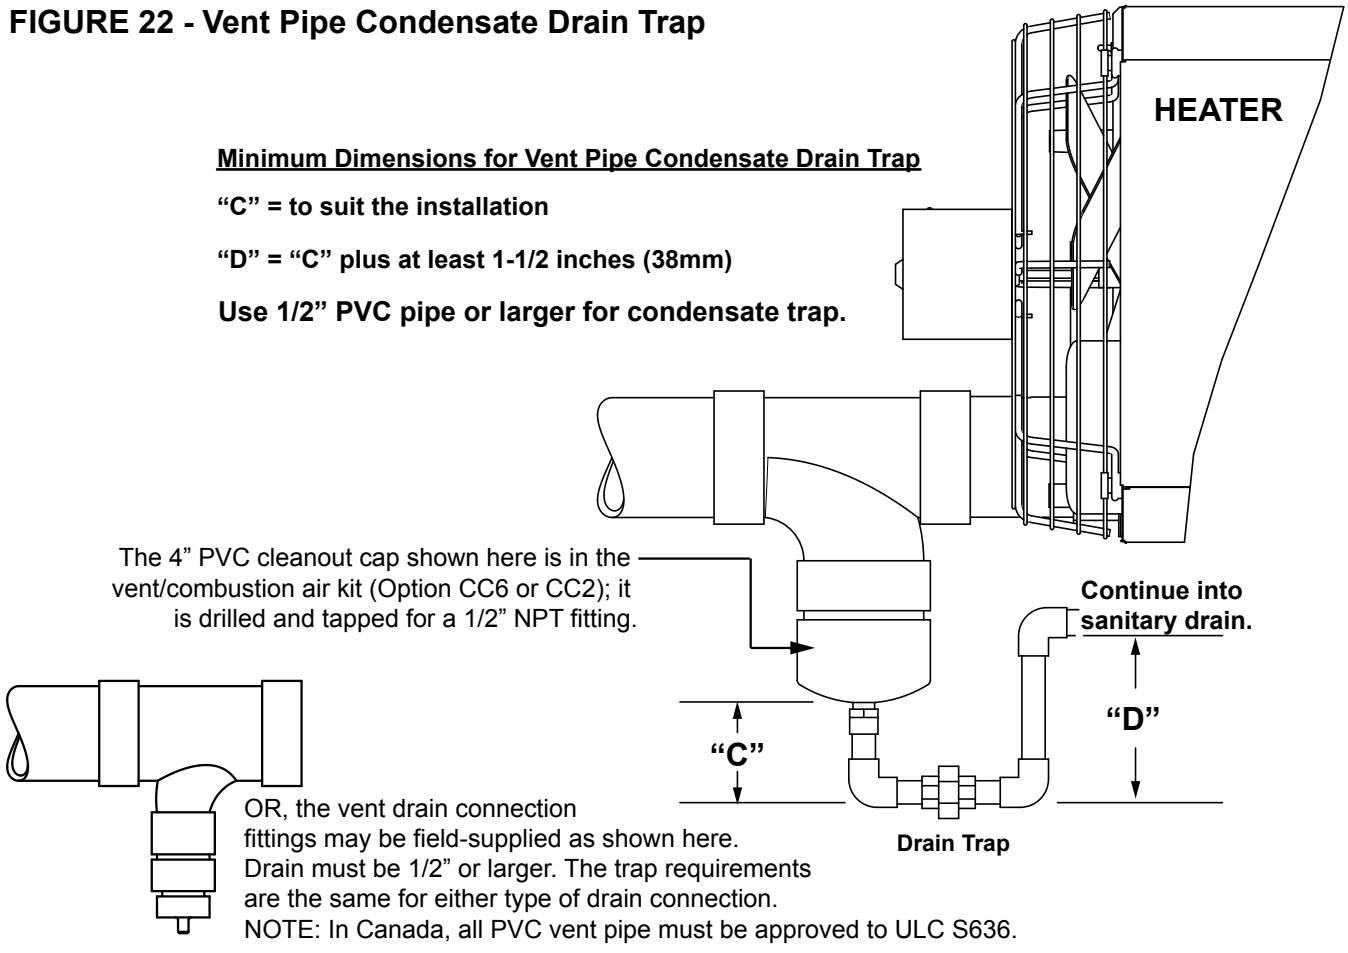

8.0 Electrical and Wiring

CAUTION: Route wires so that they do not contact the flue wrapper or venter housing.

CAUTION: If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C, except for limit control, vent temperature limit, and sensor lead wires which must be 150°C. See Hazard Levels, page 2.

8.1 Electrical Supply

All electrical wiring and connections, including electrical grounding MUST be made in accordance with the National Electric Code ANSI/NFPA No. 70 (latest edition) or, in Canada, with CSA Standard C22.1. In addition, the installer should be aware of any local ordinances or gas company requirements that might apply.

Check the rating plate on the heater for the supply voltage and current requirements. A dedicated line voltage supply with disconnect switch should be run directly from the main electrical panel to the heater. All external wiring must be within approved conduit and have a minimum temperature rise rating of 60°C. Conduit must be run so as not to interfere with the heater access panel. If the installation requires a stepdown transformer (Option CG), follow the instructions shipped with the option package for attaching the transformer to the heater.

The electrical supply enters at the rear of the heater (**FIGURE 24**). A built-in disconnect switch (20A @ 115V; 10A @ 230V Rating) is included. Supply wiring connects to leads located inside a sealed electrical box. To maintain the sealing feature of the electrical box, always replace the cover plate.

The circuit board (See **FIGURE 23**) is located inside on the bottom of the control compartment. The circuit board is polarity sensitive. It is advisable to check the electrical supply to be certain that the black wire is the “hot” wire and that the white wire is the neutral wire. The supply connection made to “L1” on the circuit board must be the “hot” wire.

NOTE: Circuit board is polarity sensitive; “hot” wire MUST BE connected to Terminal L1.

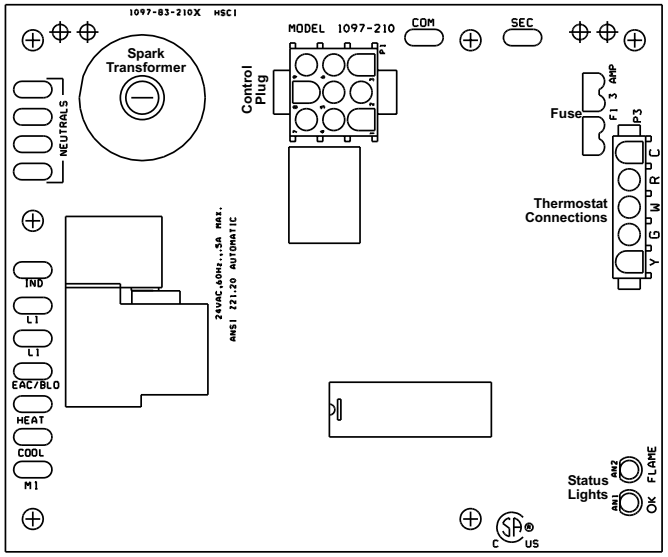

Supply Wiring Connections

FIGURE 23 - Supply Wiring Connections at the Circuit Board (DSI Integrated Control Module)

8.2 24V Control Wiring Connections

The terminal strip for 24 volt thermostat connection is located on the outside of the cabinet at the back of the heater (See **FIGURE 24**). Wires from the terminal strip are factory wired to the circuit board.

Use either an optional thermostat available with the heater or a field-supplied 24-volt thermostat. Install according to the thermostat manufacturer’s instructions, paying particular attention to the requirements regarding the location of the thermostat.

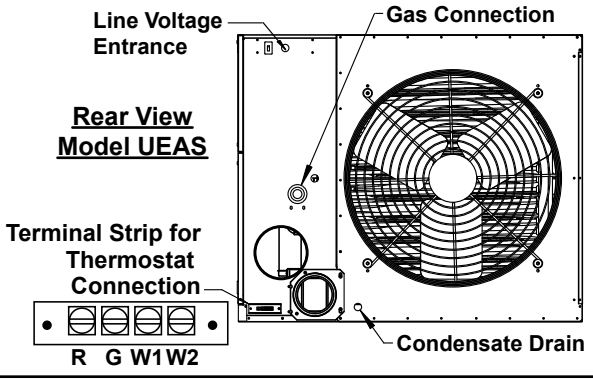

FIGURE 24 - Terminal Strip for 24-volt Wiring is on the Outside Rear of the Heater

8.3 Typical Wiring Diagram

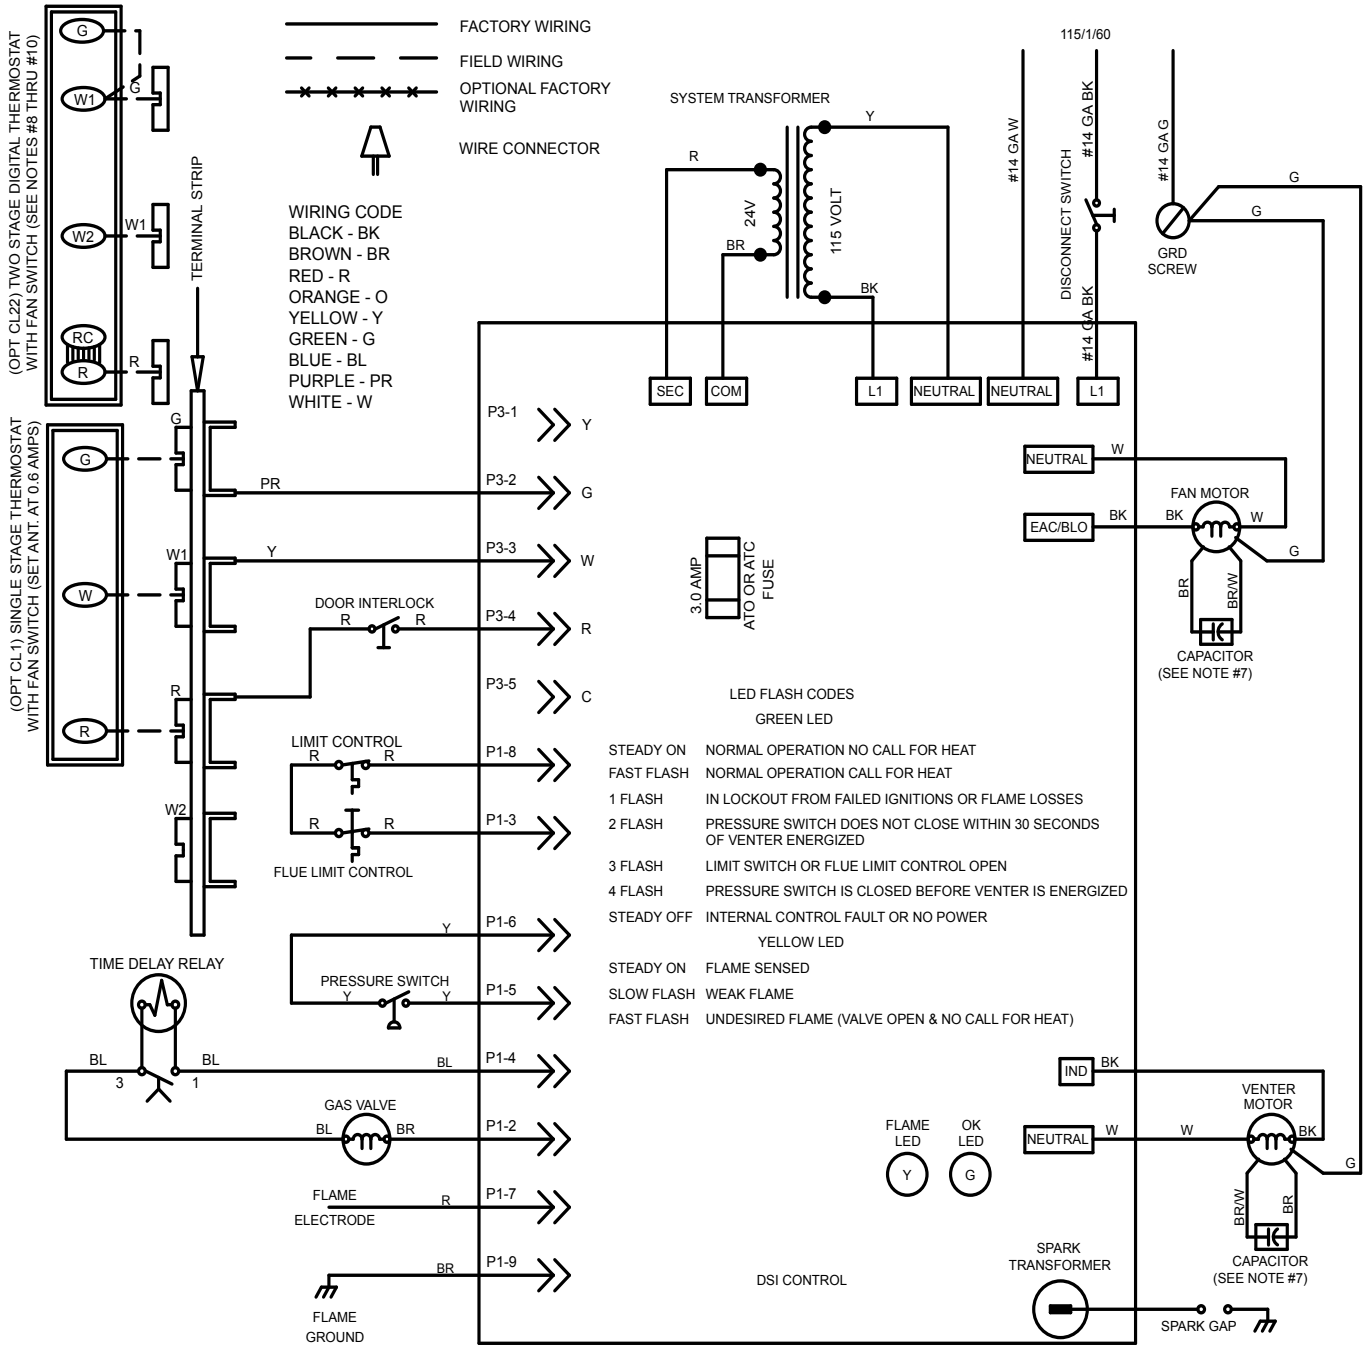

OPERATING SEQUENCE

1. SET THERMOSTAT AT LOWEST SETTING; FAN SWITCH AT "AUTO" POSITION.
2. TURN ON MANUAL GAS VALVE.
3. TURN ON POWER TO UNIT.
4. SET THERMOSTAT AT DESIRED SETTING.
5. THERMOSTAT CALLS FOR HEAT, ENERGIZING THE VENTER MOTOR.
6. VENTER PRESSURE SWITCH CLOSES, FIRING UNIT AT FULL RATE.
7. BURNER FLAME IS SENSED, AND IN 30 SECONDS THE BLOWER MOTOR IS ENERGIZED.
8. IF THE FLAME IS EXTINGUISHED DURING MAIN BURNER OPERATION, THE INTEGRATED CONTROL SYSTEM CLOSES THE MAIN VALVE AND MUST BE RESET BY INTERRUPTING POWER TO THE CONTROL CIRCUIT (SEE LIGHTING INSTRUCTIONS).
9. SET FAN SWITCH AT "ON" POSITION FOR CONTINUOUS BLOWER OPERATION.

FIELD CONTROL WIRING

TOTAL WIRE LENGTH	DISTANCE FROM UNIT TO CONTROL	MIN. RECOMMENDED WIRE GUAGE
150'	75'	#18 GA. WIRE
250'	125'	#16 GA. WIRE
350'	175'	#14 GA. WIRE

NOTES

1. THE FOLLOWING CONTROLS ARE FIELD INSTALLED OPTIONS: THERMOSTAT
2. DOTTED WIRING INSTALLED BY OTHERS.
3. CAUTION: IF ANY OF THE ORIGINAL WIRING AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105° C. EXCEPT FOR SENSOR LEAD WIRE, FLUE LIMIT CONTROL AND LIMIT WIRING WHICH MUST BE 150° C.
4. LINE AND FAN MOTOR BRANCH WIRE SIZES SHOULD BE OF A SIZE TO PREVENT VOLTAGE DROPS BEYOND 5% OF SUPPLY LINE VOLTAGE.
5. USE #14 GA. WIRE FOR LINE WIRING ON THE UNIT.
6. USE #18 GA. WIRE FOR CONTROL WIRING ON THE UNIT.
7. CAPACITOR IS REMOTE MOUNTED.
8. VERIFY JUMPER ON CL22 THERMOSTAT TERMINALS R TO RC.
9. FAN SWITCH OR LOW STAGE OF CL22 THERMOSTAT ENERGIZES THE BLOWER MOTOR.
10. HIGH STAGE OF CL22 THERMOSTAT INITIATES A CALL FOR HEAT.

UEAS SERIES: AG1

WD# 230300 REV. #2

9.0 Controls

9.1 Thermostat

If the thermostat has an anticipator setting, make sure it is set to 0.6 amps (or in accordance with the amperage value noted on the wiring diagram of your heater).

Make thermostat connections at the terminal strip on the back of the heater. The strip has four terminals, G, W1, R, and W2; refer to the wiring diagram.

IMPORTANT: All units MUST be operated by a 24-volt thermostat. Never use a line voltage disconnect switch as a means of operating the heater.

Multiple Heater Control, Option CL31 and Option CL32 - If the heater was ordered with a multiple heater control option, one thermostat can be used to control up to six heaters. The option includes a 40VA transformer that replaces the standard transformer in the "controlling" unit and a relay assembly that attaches to the additional unit. Option CL31 provides for control of two heaters. If control of additional heaters is desired (up to six total), Option CL32 which is the relay assembly only must be added to each additional heater.

The option packages are shipped separately and include complete instructions on installation and wiring.

9.2 Gas Valve

The main operating gas valve is powered by the 24-volt control circuit through the thermostat and safety controls. The main control valve is a diaphragm type providing regulated gas flow preset at the factory. (For location, see **FIGURE 28**, page 39.)

WARNING

The operating valve is the prime safety shutoff. All gas supply lines must be free of dirt or scale before connecting the unit to ensure positive closure. See Hazard Levels, page 2.

9.3 Safety Controls

9.3.1 Combustion Air Proving (Pressure Switch)

The combustion air proving switch is a pressure sensitive switch that monitors air pressure to ensure that proper combustion airflow is available. The switch senses the differential pressure between the negative pressure in the venter housing and the pressure in the cabinet. (For switch location, see **FIGURE 28**, page 39.)

On startup when the heater is cold, the sensing pressure is at the most negative level, and as the heater and vent system warm up, the sensing pressure becomes less negative. After the system has reached equilibrium (about 20 minutes), the sensing pressure levels off.

If a restriction or excessive vent length or turns cause the sensing pressure to be outside the switch setpoint, the pressure switch will function to shutoff the main burner. The main burner will remain off until the system has cooled and/or the flue system resistance is reduced.

The Table below lists the approximate water column differential pressure readings and switch setpoints for sea level operating conditions for Model UEAS heaters.

Pressure Switch Identification

Model UEAS	Startup Cold	Equilibrium Hot	Setpoint OFF	Setpoint ON	Label Color	Switch P/N
	Differential Pressure Measured in " w.c.					
130	3.0	2.8	2.65	2.75	Yellow	221251
180	3.1	2.8	2.30	2.9	Blue	221228
260	3.3	2.9	2.30	2.9	Blue	221228
310	3.5	3.2	2.30	2.9	Blue	221228

DANGER

Safe operation of this unit requires proper venting flow. NEVER bypass combustion air proving switch or attempt to operate the unit without the venter running and the proper flow in the vent system.Hazardous conditions could result. See Hazard Intensity Levels, page 2.

9.3.2 Limit Control

All units are equipped with a temperature activated auto reset limit control. The control is factory set and is non-adjustable. If the setpoint is reached, the limit control will interrupt the electric supply to the gas valve. This safety device provides protection in the case of motor failure or lack of airflow due to a restriction at the inlet or outlet. (For location, see **FIGURE 28**, page 39.)

CAUTION: The auto reset limit control will continue to shut down the heater until the cause is corrected. Never bypass the limit control; hazardous conditions could result. See Hazard Intensity Levels, page 2.

9.3.3 Vent Temperature Limiting Switch

This heater is equipped with a temperature activated, manually reset switch to limit the temperature of the vent gases to below 145°F. The switch is attached to the side of the combustion air venter housing. If the setpoint is reached, the switch will interrupt the electric supply to the gas valve. If the vent temperature switch is activated, identify and correct the cause before resetting the switch. Refer to the Maintenance Section for information on probable causes and instructions on resetting the switch.

DANGER

If the manual vent temperature switch activates, identify and correct the cause before resetting the switch. Never bypass the vent temperature switch; hazardous conditions could result. See Hazard Intensity Levels, page 2.

9.3.4 Door Switch

All Model UEAS heaters are equipped with a door switch which prevents the heater from operating when the service door panel is open. The service panel has a pliable gasket material that fully seals the door to provide added protection from building air entering the combustion zone of the heater. (For switch location, see **FIGURE 28**, page 39.)

9.3.5 Fan Motor Overload Protection

The fan motor is equipped with thermal overload protection of the automatic reset type. Should the motor refuse to run, it may be because of improper current characteristics. Make certain that the correct voltage is available at the motor.

10.0 Ignition System

This heater is equipped with a direct spark integrated control module (circuit board). The module monitors the safety devices and controls the operation of the fan and venter motors and the gas valve between heat cycles.

FIGURE 25 – DSI Integrated Control Module (circuit board)

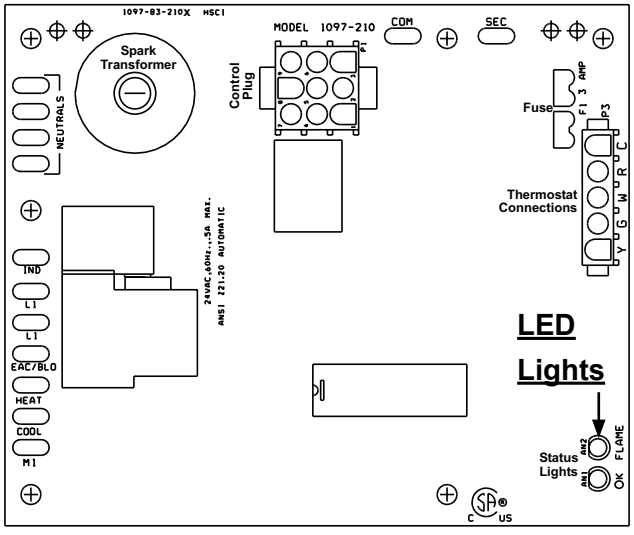

LED lights are visible through a viewport.

Control Status - Green LED Codes

Steady ON..... Normal Operation, No call for heat
Fast Flash..... Normal Operation, Call for heat
1 Flash..... System Lockout, Failed to detect or sustain flame
2 Flashes..... Pressure Switch Did Not Close within 30 Seconds of Venter motor
3 Flashes..... High Limit or Vent Temperature Limit Switch Open
4 Flashes..... Pressure switch is closed before venter motor is energized
Steady OFF ..... Blown Fuse, No Power, or Defective Board

Flame Status - Yellow LED Codes

Steady ON..... Flame is sensed
Slow Flash..... Weak flame (current below 1.0 microamps ±50%)
Fast Flash..... Undesired Flame (valve open and no call for heat)

10.0 Ignition System (cont'd)

Normal Heat Cycle Operating Sequence

1) Call for Heat - The thermostat calls for heat by energizing the "W" terminal. The control checks to see that the limit switches are closed and the pressure switch is open. If one of the limit switches is open, the control responds as defined in the "Abnormal Heat Cycle, Limit Switch Operation". If the pressure switch is closed, the control will do four flashes on the green LED and wait indefinitely for the pressure switch to open. If the pressure switch is open, the control proceeds to prepurge.

2) Prepurge - The control energizes the venter motor and waits for the pressure switch to close. If the pressure switch does not close within 30 seconds of the venter motor energizing, the control will do two flashes on the green LED. The control will leave the venter motor energized indefinitely as long as the call for heat remains and the pressure switch is open.

When the pressure switch is proven closed, the control begins the prepurge time. If flame is present any time while in prepurge, the prepurge time is restarted. If flame is present long enough to cause lockout, the control responds as defined in "Fault Modes, Undesired Flame".

The control runs the venter motor for a 20 second prepurge time, then proceeds to the ignition trial period.

3) Ignition Trial Period - The control energizes the spark and main gas valve. The venter remains energized. If flame is sensed during the first 16 seconds, the spark is de-energized and the control proceeds to heat fan/blower on delay. If flame has not been sensed during the first 16 seconds, the control de-energizes the spark output and keeps the gas valve energized for an additional one second flame proving period. If flame is not present after the flame proving period, the control de-energizes the gas valve and proceeds with ignition re-tries as specified in "Abnormal Heat Cycle, Ignition Retry". If flame is present, the control proceeds to the fan/blower on delay.

4) Fan/Blower On Delay - The control waits for 30 seconds from the time the gas valve opened and then energizes the fan/blower motor. The gas valve and venter motor remain energized. The control proceeds to steady heat mode.

5) Steady Heat - Control inputs are continuously monitored to ensure limit and pressure switches are closed, flame is established, and the thermostat call for heat remains. When the thermostat call for heat is removed, the control de-energizes the gas valve and begins post-purge and fan/blower off delay timing.

6) Post Purge - The venter motor output remains on for a 45-second post-purge period after the thermostat is satisfied.

7) Fan/Blower Off Delay - The fan/blower motor is de-energized after a blower off delay of 120 seconds.:

Abnormal Heat Cycle Functions

Interrupted Thermostat Call for Heat - If the thermostat demand for heat is removed before the flame is recognized, the control will run the venter motor for the post purge period and de-energize all outputs.

If the thermostat demand for heat is removed after successful ignition, the control will de-energize the gas valve, run the venter motor through post purge, and run the fan/blower motor on heat speed for the selected delay off time.

Ignition Retry - If flame is not established on the first trial for ignition period, the control de-energizes the gas valve and the venter motor remains energized for an inter-purge period of 10 seconds. The spark and gas valve are then re-energized, and the control initiates another trial for ignition.

If flame is not established on the second trial for ignition, the control de-energizes the gas valve, energizes the fan/blower motor on heat speed, and venter motor remains energized. The fan/blower motor is shut off after 120 seconds. When the fan/blower motor de-energizes, the spark and gas valve are re-energized and the control initiates another trial for ignition. (This fan delay is self-healing feature for an open auxiliary limit switch).

If flame is not established on the third trial for ignition period, the control de-energizes the gas valve, and the venter motor remains energized for an inter-purge

period of 10 seconds. The control then re-energizes the gas valve and spark and initiates another trial for ignition.

If flame is not established on the fourth trial for ignition (initial try plus 3 re-tries), the control de-energizes the gas valve and goes into lockout. The control goes to one flash on the green LED to indicate ignition failure lockout.

Limit Switch Operation - The limit switch is ignored unless a call for heat is present (W energized). If the limit switch is open and a call for heat is present, the control de-energizes the gas valve and turns the fan/blower motor on heat speed and runs the venter motor. The control will be in soft lockout and flashing fault code “3” before returning to normal operation.

When the switch re-closes or the call for heat is lost, the control runs the venter motor through post purge and runs the blower/fan motor through the selected fan off delay.

Pressure Switch - If the pressure switch opens before the trial for ignition period, the venter motor will run through the pressure switch recognition delay (2 seconds), the gas valve will be de-energized, and the venter motor will run through the postpurge time. The control will re-start the heat cycle at the pressure switch proving state if the call for heat still exists.

Pressure switch opening for less than 2 seconds during the trial for ignition period shall not interrupt the heat cycle. (Gas valve will de-energize while the pressure switch is open.)

If the pressure switch opens after a successful ignition, the control will de-energize the gas valve. If flame is lost before the end of the 2 second pressure switch recognition delay, the control will respond to the loss of flame. If the pressure switch remains open for 2 seconds and the flame remains, the control de-energizes the gas valve, the venter motor runs through post-purge, and the fan/blower motor runs on heat speed through the selected fan off delay. When the fan off delay is over, the fan/blower motor is de-energized, and a heat cycle is begun if the call for heat still exists.

Continuous Fan Operation

When the thermostat calls for continuous fan (G) without a call for heat, the fan motor is energized after a .25 second delay. NOTE: This brief on delay is to allow the “G” terminal to energize slightly before “Y” and an external changeover relay to switch from “G” to “W” without causing momentary glitches in the fan/blower output. The fan remains energized as long as the call for fan remains without a call for heat.

If a call for heat (W) occurs during continuous fan, the fan/blower will de-energize.

A call for fan is ignored while in lockout.

Fault Modes

Undesired Flame - If flame is sensed longer than 20 seconds while the gas valve is de-energized, the control shall energize the venter motor and fan/blower motor on heat speed. When flame is no longer sensed, the venter motor will run through postpurge, and the fan/blower motor will run through the selected heat fan off delay time. The control will do a soft lockout, but will still respond to open limit and flame. The FLAME (yellow) LED shall flash rapidly when lockout is due to undesired flame.

Gas Valve Relay Fault - If the control senses the gas valve as energized for more than one second when the control is not attempting to energize the gas valve, or the gas valve is sensed as not energized when it is supposed to be energized, then the control will lockout with green LED off. The control assumes either the contacts of the relay driving the gas valve have welded shut, or the sensing circuit has failed. The venter motor is forced off to open the pressure switch to stop gas flow unless flame is present.

If the gas valve was sensed as closed when it should be open, and has not de-energized after the venter motor was shutoff for 15 seconds, then the venter motor is re-energized to vent the unburned gas.

10.0 Ignition System (cont'd)

Abnormal Heat Cycle Functions (cont'd)

Lockout

Soft Lockout - The control shall not initiate a call for heat or call for continuous fan while in lockout. The control will still respond to an open limit and undesired flame. Lockout shall automatically reset after one hour. Lockout may be manually reset by removing power from the control for more than one second or removing the thermostat call for heat for more than one and less than 20 seconds.

Hard Lockout - If the control detects a fault on the control board, the status LED will be de-energized, and the control will lockout as long as the fault remains. A hard lockout will automatically reset if the hardware fault clears.

Power Interruption - During a momentary power interruption or at voltage levels below the minimum operating voltage (line voltage or low voltage) the system will self-recover without lockout when voltage returns to the operating range.

Power interruptions of less than 80mS shall not cause the control to change operating states. Power interruptions greater than 80mS may cause the control to interrupt the current operating cycle and re-start.

11.0 Commissioning and Startup

11.1 Check the Installation Prior to Startup

- □ Check to be sure that all screws used to hold shipping brackets were re-installed in the heater cabinet.
- □ If installed in California, verify that the California Warning Label is displayed.
- □ Check suspension. Unit must be secure and level.
- □ Check clearances. Requirements are in Paragraph 4.1.
- □ Check piping for leaks and proper gas line pressure. Bleed gas lines of trapped air. See Paragraph 7.1.
- □ Check vent system to be sure that it is installed according to the instructions in Paragraph 7.2.
- □ Check condensate drain system to be sure that it is installed according to the instructions in Paragraph 7.3
- □ Check electrical wiring. Be sure all wire gauges are as recommended. A service disconnect switch should be used. Verify that fusing or circuit breakers are adequate for the load use.
- □ Check polarity. Verify that line voltage exists between the black "L1" and earth ground.

11.2 Heater Startup

WARNINGS

For your safety, read before operating. If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

- **This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.**
- **Before operating, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.**

WHAT TO DO IF YOU SMELL GAS

- **Do not try to light any appliance.**
- **Do not touch any electrical switch; do not use any phone in your building.**
- **Leave the building immediately.**
- **Immediately call your gas supplier from a phone remote from the building. Follow the gas supplier's instructions.**
- **If you cannot reach your gas supplier, call your fire department.**

- **Use only your hand to turn the gas control ON/OFF knob on the gas valve. Never use tools. If the valve ON/OFF knob will not turn by hand, do not try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.**
- **Should overheating occur, or the gas supply fail to shut off, turn off the manual gas valve to the appliance before shutting off the electrical supply.**
- **Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.**

Operating Instructions and Operating Sequence

FIGURE 26 - Gas Valve

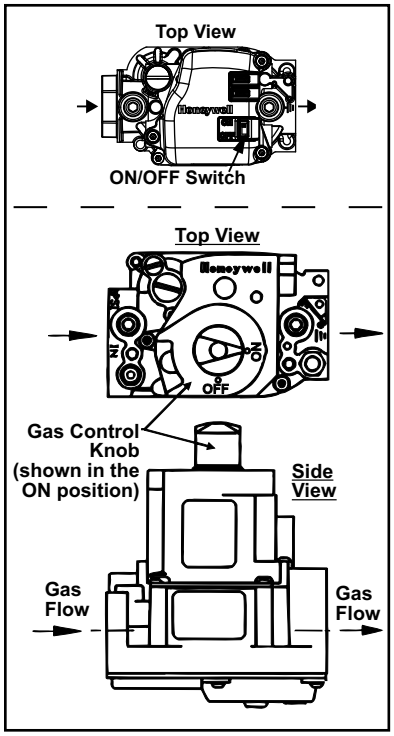

1. Set thermostat at lowest setting.
2. Turn off all electric power to the appliance.
3. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand. Open the access door and locate the gas control (ON/OFF) switch or knob on the gas valve. (See **FIGURE 26**.)
4. Turn the gas control switch to "OFF" or the knob clockwise to "OFF".
5. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. **If you smell gas, STOP!** and follow the steps in the **WARNINGS** printed above or on the Operating Label on the heater. If you do not smell gas, proceed to the next step.
6. Turn the gas control switch to "ON" or the knob counterclockwise to "ON".
7. Close the access door.
8. Turn on the electric power to the heater.
9. Set the thermostat to the desired setting.

NOTE: If the appliance does not operate, follow the instructions "To Turn Off Gas to Appliance" printed below (and on the Operating Label on the heater) and call your service technician.

10. Thermostat calls for heat, energizing the venter motor.
11. Venter pressure switch closes, firing the unit.
12. Burner flame is sensed, and in 30 seconds after the gas valve is energized, the fan motor is energized.
13. If the flame is extinguished during the main burner operation, the integrated control system closes the main valve and must be reset by interrupting power to the control circuit. (See lighting instructions on the heater.).

TO TURN OFF GAS TO THE APPLIANCE

1) Set thermostat to lowest setting
2) If service is to be performed, turn off all electric power to the appliance.
3) Open the access door.
4) Turn the gas control switch "OFF" or the knob clockwise to "OFF" (Do not force.)
5) Close the access door.

11.0 Commissioning and Startup (cont'd)

11.3 Check Installation After Startup

- □ With the unit in operation, measure valve outlet gas pressure. See information and instructions in Paragraph 7.1.3. If operated at high altitude, be sure to adjust outlet gas pressure for altitude.
- □ Turn the unit off and on, pausing two minutes between each cycle. Observe for smooth ignition.
- □ Place the packet of information containing the Limited Warranty, this booklet, and any control or optional information in an accessible location near the heater.

DANGER:

The gas burner in this gas-fired equipment is designed and equipped to provide safe controlled complete combustion. However, if the installation does not permit the burner to receive the proper supply of combustion air, complete combustion may not occur. The result is incomplete combustion which produces carbon monoxide, a poisonous gas that can cause death. Safe operation of indirect-fired gas burning equipment requires a properly operating vent system that vents all flue products to the outside atmosphere. FAILURE TO PROVIDE PROPER VENTING WILL RESULT IN A HEALTH HAZARD WHICH COULD CAUSE SERIOUS PERSONAL INJURY OR DEATH.

Always comply with the combustion air requirements in the installation codes. Combustion air at the burner should be regulated only by manufacturer-provided equipment. NEVER RESTRICT OR OTHERWISE ALTER THE SUPPLY OF COMBUSTION AIR TO ANY HEATER. MAINTAIN THE VENT/COMBUSTION AIR SYSTEM IN STRUCTURALLY SOUND AND PROPER OPERATING CONDITION.

12.0 Maintenance and Service

WARNING: If you turn off the power supply, turn off the gas. See Hazard Levels, page 2.

The material contained in the MAINTENANCE AND SERVICE Section of this manual is designed to aid a qualified service person in maintaining and servicing this equipment. This heater will operate with a minimum of maintenance. To ensure long life and satisfactory performance, a heater that is operated under normal conditions should be inspected and cleaned at the start of each heating season. If the heater is operating in an area where an unusual amount of dust or soot or other impurities are present in the air, more frequent maintenance is recommended.

When any service is completed, be careful to reassemble correctly to ensure that no unsafe conditions are created. When re-lighting, always follow the lighting instructions on the heater.

12.1 Maintenance Schedule

The following procedures should be carried out at least annually (See **FIGURE 28, page 39,** and Paragraphs 12.2.1 - 12.2.16.):

- Clean all dirt, lint, and grease from the combustion air opening and venter assembly.
- Clean all dirt, lint, and grease from the fan blade, fan guard, and motor.
- Clean the condensate traps.
- Check the heat exchanger both internally and externally.
- Check the burner for scale, dust, or lint accumulation. Clean if needed.
- Check gas valve to ensure that gas flow is being shutoff completely.

- Check the vent/combustion air system for soundness. Clean openings. Replace any parts that do not appear sound.
- Check the wiring for any damaged wire. Replace damaged wiring. (See Paragraph 8 for replacement wiring requirements.)

NOTE: If replacement parts are required, use only factory-authorized parts.

12.2 Maintenance Procedures

12.2.1 Heat Exchanger Maintenance

This heater has a TCORE^{3} ® heat exchanger (patent pending).

Remove any external dirt or dust accumulation. Visually check the heat exchanger for cracks and holes. If a crack or hole is observed, replace the heat exchanger. A TCORE^{3} ® heat exchanger has a primary and a secondary heat exchanger; check both sections.

NOTE: Inspection of the lower portion of the heat exchanger is done with the burner removed. See the Burner Service section below for information on inspecting the lower portion of the heat exchanger.

12.2.2 Burner Maintenance

This heater is equipped with a TCORE^{2}® burner.

Inspect the burner/control compartment annually to determine if cleaning is necessary. If there is an accumulation of dirt, dust, and/or lint, clean the compartment and follow the instructions below to remove and clean the burner.

Burner Removal Instructions (Refer to FIGURE 27.)

CAUTION: Use of eye protection is recommended.

1. Outside the cabinet, shut the gas supply off at the manual valve ahead of the union.
2. Turn off electric supply.
3. Disconnect the gas supply at the union outside of the cabinet.
4. Remove the access panel.

FIGURE 27 - Burner Removal

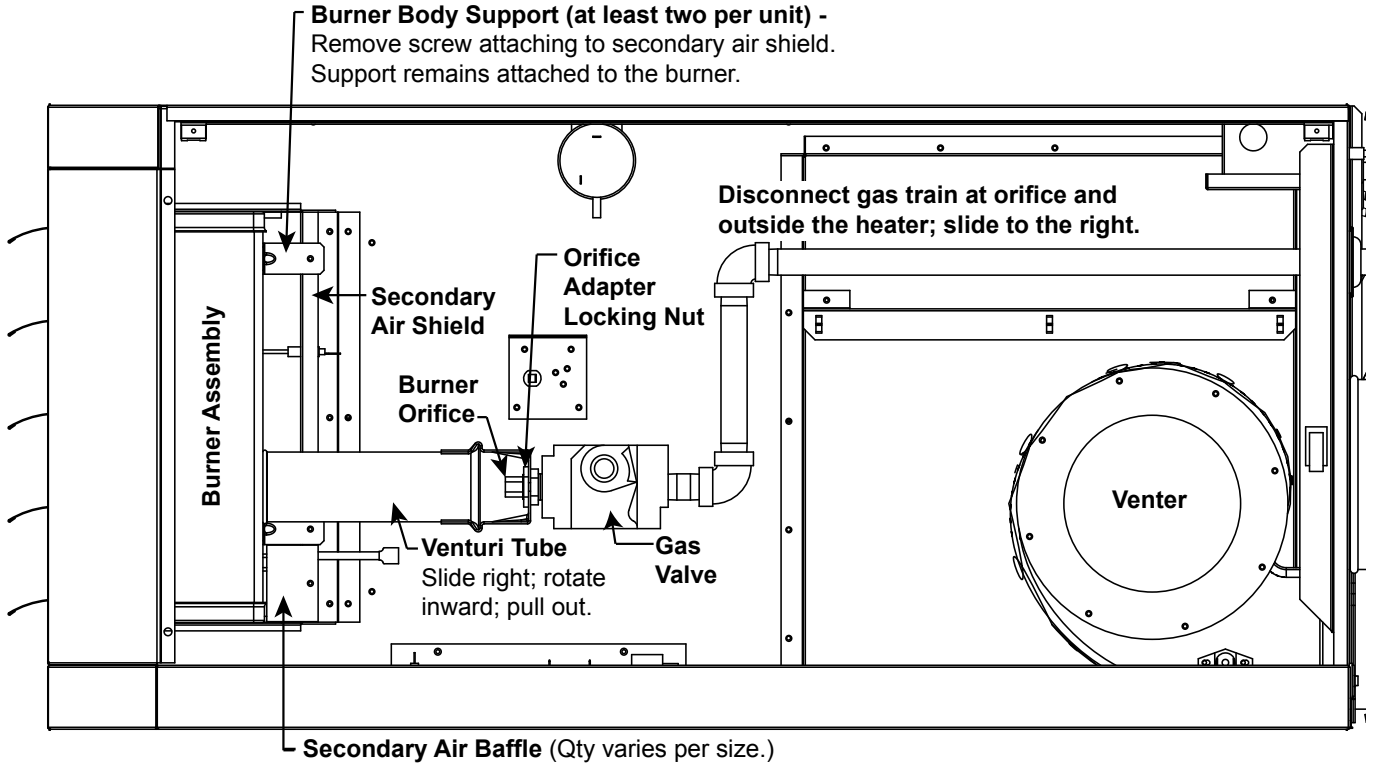

12.0 Maintenance and Service (cont'd)

12.2 Maintenance Procedures (cont'd)

12.2.2 Burner Maintenance (cont'd)

5. **Disconnect and Move the Gas Train** - At the gas valve, mark and disconnect the wires. Carefully remove the burner orifice and orifice adapter locking nut. Slide the orifice adapter out through the bracket on the burner pushing the gas train to the right. This will move the gas train out of the way.
6. **Remove Secondary Air Baffles)** - Vertical along the right side of the burner, locate the flat plate(s) identified as the secondary air baffle(s). The quantity of baffles could be one to four depending on heater size. Each baffle is held in place by one screw. **For re-assembly, on the secondary air shield, mark the location (top and bottom) of each baffle.** Remove all baffles.
7. **Remove Burner Assembly**

   a) Locate the burner body supports. Depending on the size, the burner will have two or more supports. At each support, remove the one screw that attaches it to the secondary air shield

   b) Holding the venturi tube, slide the entire burner assembly slightly to the right to disengage the burner from the supports on the left. Then rotate the open end of the venturi tube inward toward the heater. Carefully pull the burner assembly out of the cabinet.

Inspect and Clean the Burner

With the burner assembly removed, shine a flashlight on the burner ribbons. Look for carbon buildup, scale, dust, lint, and/or anything that might restrict flow through the spaces between the burner ribbons. Holding the burner assembly so that any foreign material will fall away from the burner, use a stiff bristle brush to loosen and remove any foreign material(s). If the burner is excessively dirty, remove one of the burner end caps. Remove the four screws that hold the end cap to the burner housing. Lightly tap the end cap to remove it.

Clean all foreign material from the burner and venturi. After the burner is thoroughly clean, replace the end cap making certain that it is tight against the burner housing. **NOTE:** If any of the burner components are damaged or deteriorated, replace the burner assembly.

Inspect the Lower Portion of the Heat Exchanger (with burner assembly removed)

At the burner flame entrance of each tube, shine a bright light into each heat exchanger section. With the light shining into the heat exchanger, observe the outside for visible light. Repeat this procedure with each heat exchanger section. If any light is observed, replace the heat exchanger.

Re-Install the Burner

Instructions to Re-Install the Burner (Refer to FIGURE 27)

1. **Attach the Burner Assembly -** Holding the venturi tube, slide the entire burner assembly into position. Align the supports on the left side with the slots in the burner shield; sliding the supports into the slots. On the right, re-attach each burner body support to the secondary air shield.
2. **Attach the Secondary Air Baffles** - Re-attach the secondary air baffles as marked. Baffles may be different sizes and each **must** be attached in the correct location.
3. **Attach the Control Assembly** - Carefully slide the control assembly into position. Re-attach with the same screws. Check to be sure all wire connections are secure.
4. **Attach the Gas Train** - Slide the gas train so that the orifice adapter is through the bracket. Fasten the gas train to the bracket with the locking nut. Install the gas orifice. Re-connect the wires to the gas valve.
5. **Close the access panel.**
6. **Reconnect the gas supply** at the union outside of the cabinet. Leak test the connection with leak detecting solution.
7. **Turn on the electric and the gas. Check for proper operation**.

12.2.3 Burner Orifice

Burner orifice usually only needs to be replaced when installing a gas conversion kit. If ordering a replacement orifice only, give BTUH content and specific gravity of gas, as well as the model and serial number of the unit. When removing or replacing the burner orifice, be careful not to damage the venturi tube and/or the bracket.

FIGURE 28 - Location of Controls

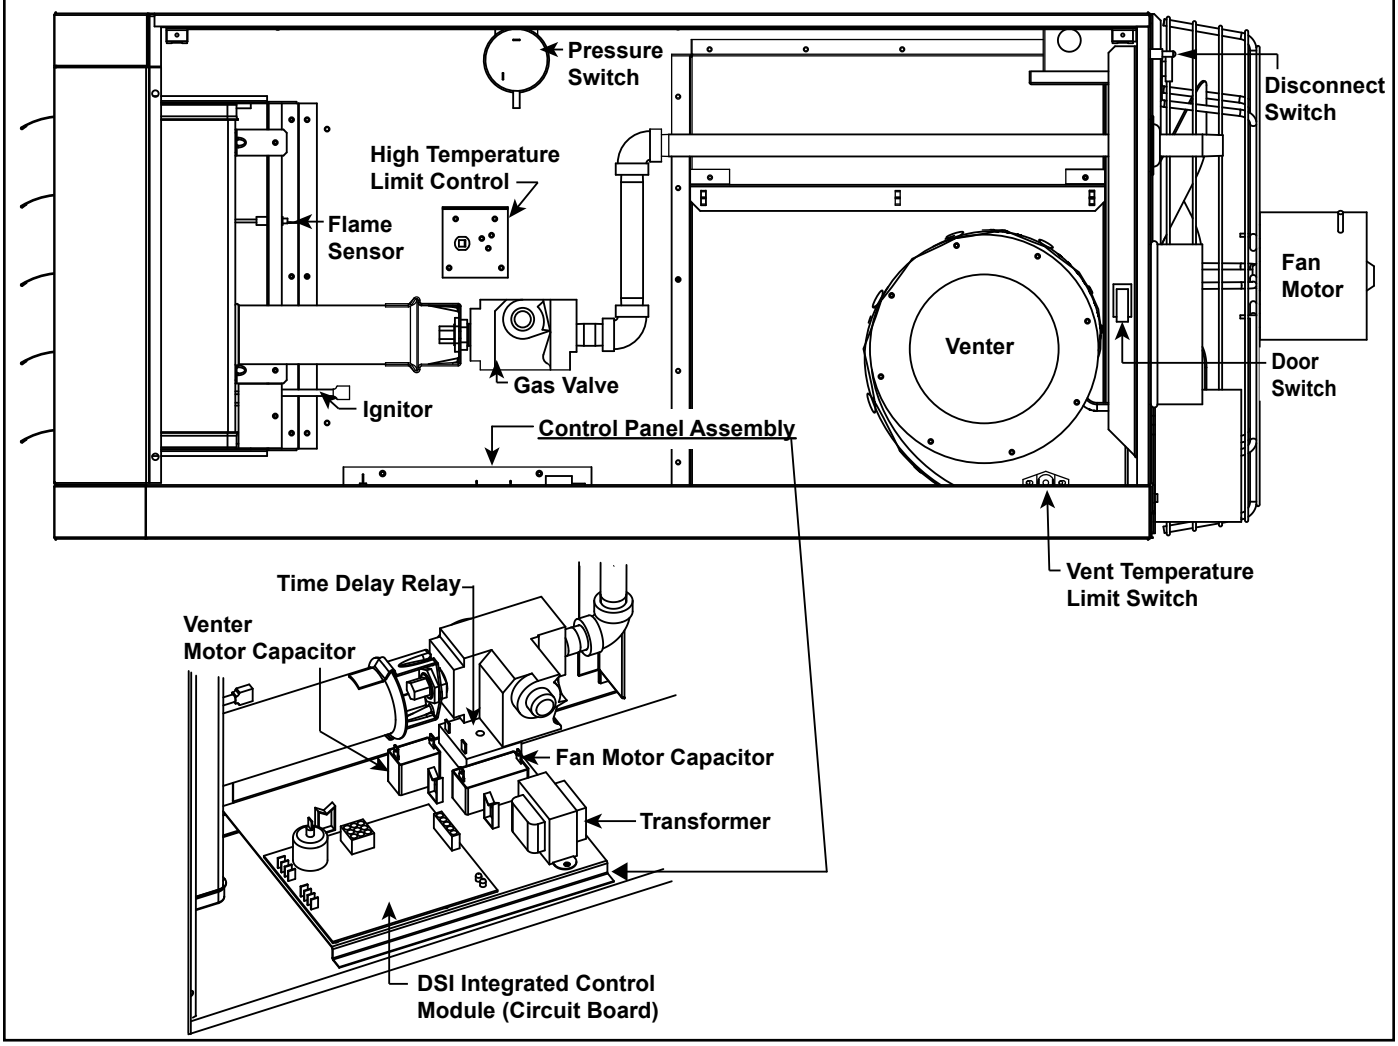

FIGURE 29 - DSI Integrated Control Module (Circuit Board)

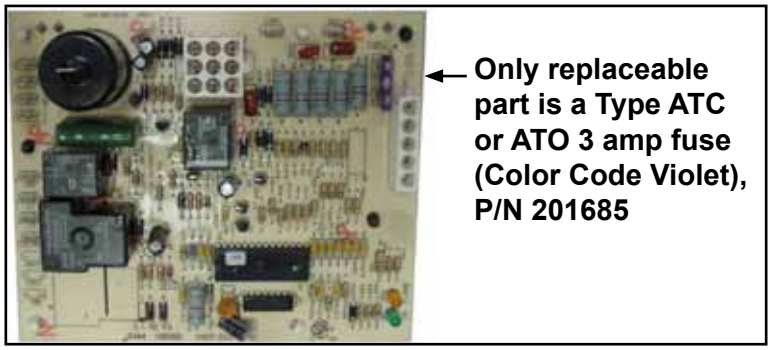

12.2.4. Ignition System

DSI Integrated Control Module (circuit board) - See FIGURE 29. The module monitors the operation of the heater including ignition. The only replaceable component is the 3 amp Type ATC or ATO fuse. If the fuse is blown, the problem is most likely an external overload. Correct the problem and replace the fuse.

Do not attempt to disassemble the control module. However, each heating season check the lead wires for insulation deterioration and good connections.

Proper operation of the direct spark ignition system requires a minimum flame signal of 1.0 microamps as measured by a microampmeter.

NOTE: For additional information and check out procedure on the direct spark ignition system, refer to Paragraph 10 and the Troubleshooting Flow Chart in Paragraph 12.3.

12.0 Maintenance and Service (cont'd)

12.2 Maintenance Procedures (cont'd)

12.2.4. Ignition System (cont'd)

Ignitor - Refer to **FIGURE 28** and locate the ignitor. Disconnect the wire; remove the screw and the ignitor. Clean the ignitor assembly with an emery cloth.

Spark gap must be maintained to 1/8". See **FIGURE 30**.

IMPORTANT: When re-assembling, the brown ground wire must remain attached to the ignitor.

Ignitor

CAUTION: Due to high voltage on the spark wire and electrode, do not touch when energized. See Hazard Levels, page 2.

FIGURE 30 - Ignitor showing required Spark Gap Measurement

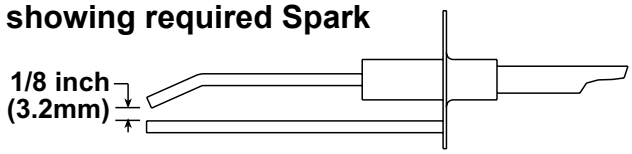

Flame Sensor

Flame Sensor - Refer to **FIGURE 28** and locate the flame sensor. Disconnect the wire; remove the screw and the flame sensor. Clean with an emery cloth.

12.2.5 Fan Motor, Fan Blades, and Guard

Remove dirt and grease from the motor, the fan guard, and blades. Use care when cleaning the fan blades to prevent causing misalignment or imbalance. Check that the hub of the fan blades is secure to the shaft.

Follow these instructions for replacement of the fan guard, fan motor and/or fan blades.

1. If the heater is installed, turn off the gas and disconnect the electric power.
2. Open the access door and disconnect the fan motor wires, capacitor wires at the capacitor, and ground screw.
3. Remove the assembled parts (the fan guard, the motor and the fan blade).
4. Disassemble and replace whatever parts are needed and reassemble using whatever part(s) are being replaced and the original parts.
   Be sure the fan blade is in the proper position on the shaft; refer to the illustration and table in **FIGURE 31.**

FIGURE 31 - Fan Blade Position on the Shaft

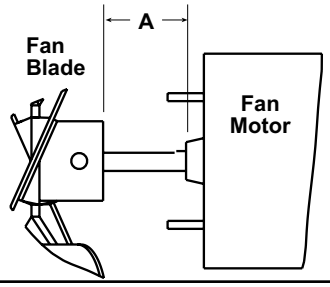

Dimension A

Size	inches	mm
130, 180	1-5/8	67
260	2	51
310	1-7/8	48

Position the assembly on the heater. Attach the fan guard.

Rotate the fan blade to check for adequate clearance. If adjustment is required, loosen the mounting screws, re-position the fan guard, and tighten the screws. Rotate the fan blade and re-check for adequate clearance. Repeat this procedure until the assembly is positioned properly.

5. Reconnect the fan motor wires according to the wiring diagram and close the access panel.
6. Restore power to the heater and turn on the gas. Light, following the instructions on the lighting instruction plate. Check for proper operation.

12.2.6 Venter Motor, Wheel, and Pressure Sensing Tap

Remove dirt and grease from the motor casing, the venter housing, pressure sensing tap, and the venter wheel. Venter motor bearings are permanently lubricated. Follow these instructions for replacement of the venter motor and wheel assembly. Keep all hardware removed to be used in re-assembling and installing the replacement parts.

Replacement Instructions

FIGURE 32 - Venter Wheel Position on Shaft

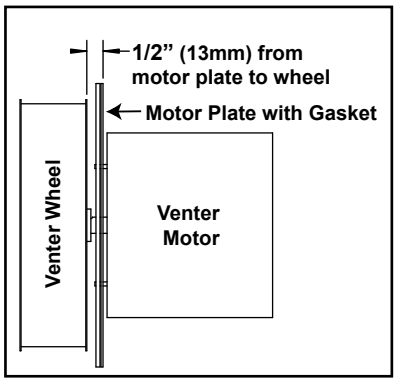

1. Turn off the gas and disconnect the electric power.
2. Open the burner/control compartment access panel.
3. Disconnect the three venter motor wires at the DSI control, capacitor wires at the capacitor (if applicable), and ground screw (located on the control panel).
4. Holding the venter motor, remove the six screws that attach the venter motor mounting plate to the venter housing. Remove the motor and wheel assembly from the heater.
5. Re-assemble with the replacement venter motor and wheel assembly. See **FIGURE 32**. If the motor plate gasket is damaged, it must be replaced.
6. Follow the wiring diagram to connect the venter wires.
7. Replace the access panel. Restore power to the heater and turn on the gas. Light, following the instructions on the lighting instruction plate. Check for proper operation.

12.2.7 Operating Gas Valve

WARNING

The operating valve is the prime safety shutoff. All gas supply lines must be free of dirt or scale before connecting to the unit to ensure positive closure. See Hazard Levels, page 2.

FIGURE 33 - Pressure Tap for Checking Gas Flow Shutoff

Carefully remove external dirt accumulation and check wiring connections.

The combination gas valve must be checked annually to ensure that the valve is shutting off gas flow completely.

Instructions:

1) Locate the 1/8" NPT pressure tap on the combination valve.
2) With the manual valve turned off to prevent flow to the gas valve, connect a manometer to the 1/8" outlet pressure tap in the valve. **NOTE**: A manometer (fluid-filled gauge) is recommended.
3) Turn the manual valve to the ON position and the heater OFF. Use your finger to fully block the main burner orifice for several seconds. Observe the manometer with the orifice blocked, and if any pressure is indicated, the gas valve is leaking. **A leaking gas valve must be replaced before the heater is put back in operation**

Top Views of Two Styles of Valves used on UEAS Units

NOTE: Operational pressure settings and instructions for checking pressure settings are in Paragraph 7.1.3.

Pressure Switch

12.2.8 Combustion Air Pressure Switch

See **FIGURE 28**, page 39, for location. If it is determined that the pressure switch needs replacing, use only the factory-authorized replacement part that is designed for the model and size of heater being serviced.

Limit Control

12.2.9 Limit Control

If it is determined that the limit control needs replacing, use only a factory-authorized replacement part that is designed for the size of heater.

For approximate limit location, see **FIGURE 28**, page 39.

Door Switch

12.2.10 Door Switch

If it is determined that the door switch needs replacing, use only a factory-authorized replacement part that is designed for the heater.

12.0 Maintenance and Service (cont'd)

12.2 Maintenance Procedures (cont'd)

For location of controls, see FIGURE 28, page 39.

12.2.11 Time Delay Relay

If it is determined that the time delay relay needs replacing, use only a factory-authorized replacement part that is designed for the heater

Time Delay Relay

12.2.12 Transformer

Use a voltmeter to verify that there are 24 volts output from the transformer. If the transformer is not functioning, it must be replaced. Use a replacement transformer identical to the factory-installed model.

Transformer

Vent Temperature Limit Switch

12.2.13 Vent Temperature Limit Switch

The vent temperature limit switch is located on the discharge of the combustion air blower (venter) and its purpose is to prevent the vent gas temperature from exceeding a temperature that will harm the PVC vent pipe. If the vent temperature limit switch is activated, the cause must be determined and corrected before the heater is placed back into operation. Activation of the manually reset vent temperature limit switch could be caused by one or more of the following:

- Manifold gas pressure too high
- The heat content of the fuel being burned is too high
- Reduced circulating airflow due to dirty an/or plugged air moving components
- Excess dirt on the heat exchangers
- Failed heat exchanger(s)

After the cause is determined and corrected, depress the red button on the switch to reset it.

Disconnect Switch

12.2.14 Disconnect Switch

The disconnect switch is located in the sealed electrical box inside the control compartment with the toggle on the rear of the heater.

If it is determined that the disconnect switch needs replacing, use only the factory-authorized replacement part that is designed for the heater. Always replace electrical box cover.

12.2.15 Vent/Combustion Air System

Check the complete system at least once a year. Inspection should include all joints, seams, concentric adapter box, inlet air guard or cap, and the vent terminal cap. Clean openings. Replace any defective parts.

12.2.16 Condensate Drain System

Check the condensate disposal system annually. Remove the condensate traps and flush them with clear tap water to remove any sediment that my have accumulated. Check to be certain the piping to the sanitary drain has not been damaged. Check the sanitary drain to verify that it flows freely.

12.3 Troubleshooting

DSI Integrated Control Module (Circuit Board) Trial Troubleshooting Flowchart

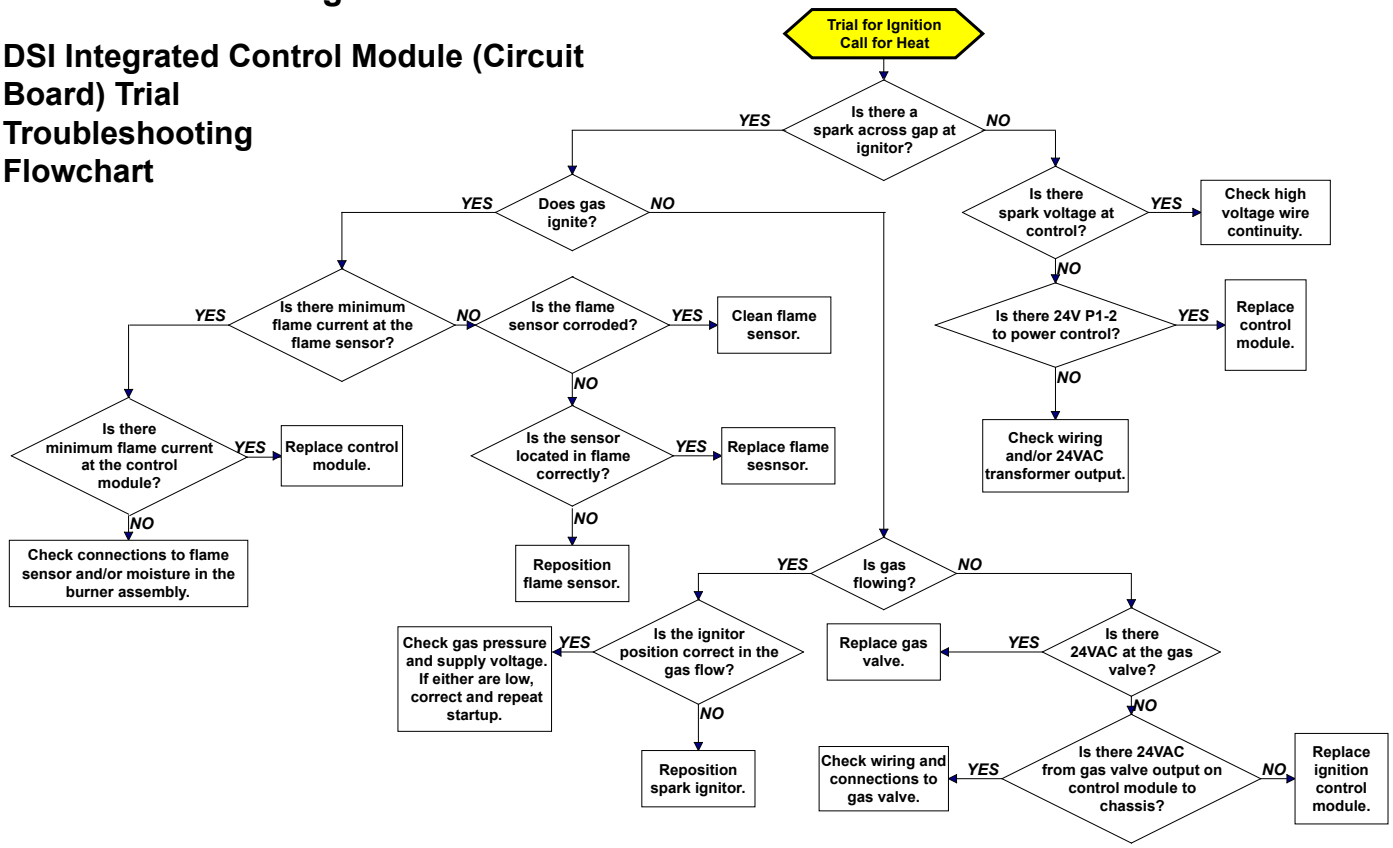

Check the Lights on the DSI Integrated Control Module (Circuit Board)

IMPORTANT: When using a multimeter to troubleshoot the 24 volt circuit, place the meter's test leads into the 5 or 9 pin connectors located on the ignition control. Do not remove connectors or terminals from the electrical components. Doing so can result in misinterpreted readings due to the ignition control board's fault mode monitoring circuits.

The integrated circuit board monitors the operation of the heater and includes two LED signal lights that indicate normal operation and various abnormal conditions. If the heater fails to operate properly, check this signal to determine the cause and/or to eliminate certain causes. LED is visible through the door. See operating sequence in Paragraph 10.

Do not attempt to repair the DSI integrated control module (circuit board); the only field replaceable component is the fuse.

Control Status - Green LED Codes

Steady ON.....	Normal Operation, No call for heat
Fast Flash.....	Normal Operation, Call for heat
1 Flash.....	System Lockout, Failed to detect or sustain flame
2 Flashes.....	Pressure Switch Did Not Close within 30 Seconds of Venter Motor
3 Flashes.....	High Limit or Vent Temperature Limit Open
4 Flashes.....	Pressure Switch is Closed Before Venter Motor is Energized
Steady OFF.....	Blown fuse, No Power, or Defective Board

Flame Status - Yellow LED Codes

Steady ON.....	Flame is sensed
Slow Flash.....	Weak flame (current below 1.0 microamps ± 50%)
Fast Flash.....	Undesired Flame (valve open and no call for heat)

12.0 Maintenance and Service (cont'd)

12.3 Troubleshooting (cont'd)

General Troubleshooting

PROBLEM	PROBABLE CAUSE	REMEDY
Venter motor will not start	1. No power to unit.	1. Turn on power; check supply fuses or main circuit breaker. Turn on built-in disconnect switch; replace switch if not operating.
	2. No 24 volt power to integrated circuit board.	2. Turn up thermostat; check control transformer output.
	3. Integrated circuit board fuse blown.	3. Correct cause. Replace fuse (type ATC or ATO, 32VDC, 3A).
	4. No power to venter motor.	4. Tighten connections at circuit board and/or motor terminals.
	5. Integrated circuit board defective.	5. Replace integrated circuit board.
	6. Defective venter motor.	6. Replace venter motor. See Paragraph 12.2.6.
Burner will not light	1. Manual valve not open.	1. Open manual valve.
	2. Air in the gas line.	2. Bleed gas line (initial startup only).
	3. Gas pressure too high or too low.	3. Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane.
	4. No Spark:	4.
	a) Loose wire connections.	a) Be certain all wire connections are solid.
	b) Transformer failure.	b) Be sure 24 volts is available.
	c) Incorrect spark gap.	c) Maintain spark gap at 1/8" (3.2mm).
	d) Spark cable shorted to ground.	d) Replace worn or grounded spark cable.
	e) Spark electrode shorted to ground.	e) Replace if ceramic spark electrode is cracked or grounded.
	f) Burner not grounded.	f) Make certain integrated circuit board is grounded to ignitor.
	g) Circuit board not grounded.	g) Make certain integrated circuit board is grounded to furnace chassis.
	h) Unit not properly grounded.	h) Make certain unit is properly field grounded to earth ground and properly phased (L1 to hot lead L2 to neutral).
	i) Integrated circuit board fuse blown.	i) Correct cause. Replace fuse (type ATC or ATO, 32VDC, 3A).
	j) Faulty integrated circuit board.	j) If 24 volt is available to the integrated circuit board and all other causes have been eliminated, replace board.
	5. Lockout device interrupting control circuit by above causes.	5. Reset lockout by interrupting control at the thermostat or main power.
	6. Interlock door switch open.	6. Close access door or replace switch.
	7. Combustion air proving switch not closing	7.
		a) Make sure unit is properly vented.
		b) Remove obstructions from vent.
		c) Replace faulty tubing to pressure switch.
	8. Faulty combustion air proving switch.	8. Replace combustion air proving switch.
	9. Main valve not operating.	9.
	a) Defective valve.	a) If 24 volt is measured at the valve connections and valve remains closed, replace valve.
	b) Loose wire connections	b) Check and tighten all wiring connections.
	10. Integrated circuit board does not power main valve.	10.
	a) Loose wire connections.	a) Check and tighten all wiring connections.
	b) Flame sensor grounded.	b) Be certain flame sensor lead is not grounded or insulation or ceramic is not cracked. Replace as required.
	c) Incorrect gas pressure.	c) Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane.
	d) Cracked ceramic at sensor.	d) Replace sensor.
	11. Faulty time delay relay.	11. Replace time delay relay.

PROBLEM (cont'd)	PROBABLE CAUSE (cont'd)	REMEDY (cont'd)
Burner cycle on and off	1. Gas pressure too high or too low.	1. Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane.
	2. Burner not grounded	2. Make certain integrated circuit board is grounded to ignitor.
	3. Circuit board not grounded.	3. Make certain integrated circuit board is grounded to furnace chassis.
	4. Faulty integrated circuit board	4. If 24 volt is available to the integrated circuit board and all other causes have been eliminated, replace board.
	5. Combustion air proving switch not closing	5.
		a) Make sure unit is properly vented.
		b) Remove obstructions from vent.
		c) Replace faulty tubing to pressure switch.
	6. Faulty combustion air proving switch.	6. Replace combustion air proving switch.
	7. Flame sensor grounded.	7. Be certain flame sensor lead is not grounded or insulation or ceramic is not cracked. Replace as required.
	8. Cracked ceramic at sensor.	8. Replace sensor.
	9. Incorrect polarity.	9. Reverse line volt leads to integrated circuit board.
	10. Pin terminal loose on 9 pin plug.	10. Replace wire harness.
No heat (Heater Operating)	1. Incorrect valve outlet pressure or orifice.	1. Check valve outlet pressure. See Rating plate for manifold pressure.
	2. Cycling on limit control.	2. Check air throughput.
	3. Improper thermostat location or adjustment.	3. See thermostat manufacturer's instructions.
Fan or venter motor will not run	1. Circuit open.	1. Check wiring and connections.
	2. Defective integrated circuit board.	2. Replace board.
	3. Defective motor.	3. Replace motor.
Fan or venter motor turns on and off while burner is operating	1. Motor overload device cycling on and off.	1. Check motor load against motor rating plate. Replace motor if needed.
Fan or venter motor cuts out on overload	1. Low or high voltage supply.	1. Correct electric supply.
	2. Defective motor.	2. Replace motor.
	3. Poor airflow.	3. Clean motor, fan, and fan guard.

APPENDIX

TECHNICAL DATA					
Model UEAS		**130**	**180**	**260**	**310**
Input Heating Capacity	BTUH	131,000	175,000	260,000	305,000
	kw	38.4	51.2	76.1	89.3
Thermal Efficiency (%)		93	91	92	91
Output Heating Capacity [A]	BTUH	121,830	159,250	239,200	277,550
	kw	35.7	46.6	70.0	81.3
Gas Connection (inches) [B]	Natural	1/2	1/2	3/4	3/4
	Propane	1/2	1/2	3/4	3/4
Vent Connection Diameter (inches)		4	4	4	4
Combustion Air Inlet Diameter (inches)		6	6	6	6
Control Amps (24 volt)		1.0	1.0	1.0	1.0
Full Load Amps (115 volt)		6.3	6.3	10.0	10.0
Maximum Over Current Protection [C D]	Standard 115V	15	15	20	20
Normal Power Consumption (watts)		657	657	1020	1020
Discharge Air Temperature Rise (°F)		50	60	50	60
Air Volume	CFM	2256	2458	4430	4283
	M^3/Minute	63.9	69.6	125.4	121.3
Discharge Air Opening Area	ft^2	2.6	2.6	4.8	4.8
	M^2	0.2	0.2	0.5	0.5
Outlet Velocity	FPM	883	962	924	894
	M/Minute	269	293	282	272
Fan Motor HP [D]	Standard Open	1/4	1/4	1/2	1/2
	Optional Enclosed	1/4	1/4	1/2	1/2
Fan Motor RPM		1050	1050	1050	1050
Fan Diameter (inches)		18	18	24	24
Approximate Condensate per Hour	Gallons	1	1	2	2
	Liters	4	4	8	8

[A] CSA ratings for altitudes to 2000 ft.

[B] Size shown is for gas connection to a single-stage gas valve, not supply line size.

[C] MOCP = 2.25 x (largest motor FLA) + smallest motor FLA. Answer is rounded to the nearest available standard circuit breaker size.

[D] Except where indicated, information in this table is based on a heater equipped with a standard 115 volt open fan motor.

Operating Principle showing Combustion Airflow and Supply Airflow

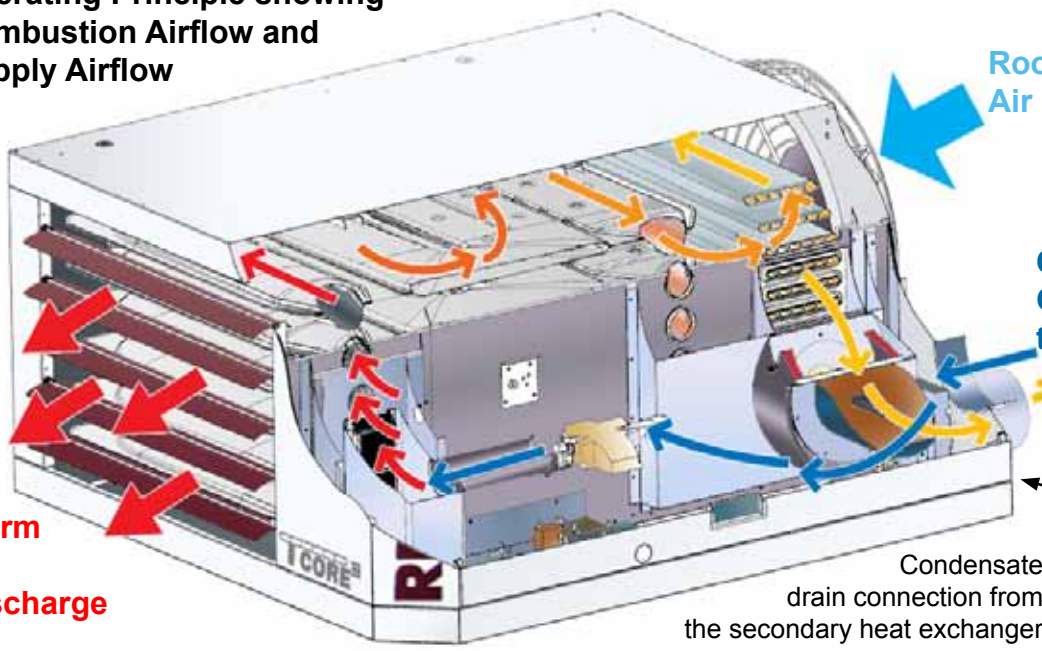

This unit heater is a high efficiency appliance designed to extract part of the latent heat from the products of combustion. This process forms condensation which is collected and directed to a drainage point inside the unit. The heater is equipped with a 1/2" (12.7mm) PVC pipe for connecting to a condensate drain. The water condensed from the products of combustion will be acidic. The level of concentration is dependent upon the environment where the appliance is installed and may be as high as 6PH. DO NOT USE COPPER OR COPPER BASED ALLOYS FOR CONDENSATE DRAINS.

INDEX

A
Abnormal Heat Cycle Functions 32

B
Burner Maintenance 37, 38
Burner Orifice 38
Burner Removal Instructions 37

C
California Warning Label 4
Check Installation After Startup 36
Check the Installation Prior to Startup 34
Clearance 17
Clearances 7
Combustion Air Inlet 13
Combustion Air Inlet Pipe 13
Combustion Air Pipe Support 17
Combustion Air Pressure Switch 41
Combustion Air Proving (Pressure Switch) 30
Concentric Adapter Box Connections 18
Concentric Adapter Box Dimensions 17, 18
Condensate Drain 26
Condensate Drain System 42
Condensate Drain Traps 26
Continuous Fan Operation 33
Location of Controls 39
Control Wiring 28
Conversion Instructions 12
Converting to Propane 12

D
Derate by Valve Outlet Pressure 10
Dimensions 6
Disconnect Switch 42
Door Switch 31, 41
Downturn Nozzle 7
DSI Integrated Control Module 31, 39, 43

E
Electrical Supply 28

F
Fan/Blower OFF Delay Settings 31
Fan Blades 40
Fan Motor 40
Fault Modes 33
Flame Sensor 40

G
Gas Connections 9
Gas Supply 8
Gas Valve 30, 35, 41

H
Hanging the Heater 7, 8
HAZARD INTENSITY LEVELS 2
Hazards of Chlorine 5
Normal Heat Cycle Operating Sequence 32
Heat Exchanger Maintenance 37
High Altitude 7
High Altitude Capacity 12
High Altitude Derate 10
Horizontal Vent/Combustion Air Kit Option CC6 19
Horizontal Vent/Combustion Air Terminal (Option CC6) 21

I
Ignition System 31, 39, 40
Ignitor 40
Installation Codes 3, 4

J
Joints 15, 16

L
LED Codes 43
Length 15
Limit Control 31, 41
Heater Location 4
Lockout 34

M
Maintenance Schedule 36
Massachusetts Requirement 4
Motor Overload Protection 31

O
Operating Instructions 35
Operating Principle 46
Operating Sequence 35
Option CL31 30
Option CL32 30

P
Type of Pipe 13
Pipe Diameter 15
Pressure Sensing Tap 40
Pressure Setting 10
Pressure Switch Identification 30

S
Special Installations 4
Startup 34
Swivel Connectors 8

T
Terminal Strip 28
Thermostat 30
Heater Throw 4
Transformer 42
Troubleshooting 43

U
Uncrating 5, 6

V
Valve Outlet Pressure 10
Valve Outlet Pressure Settings by Elevation 11
Vent/Combustion Air System 42
Venter Motor 40
Venter Outlet 13
Vent Pipe 13
Vent Pipe Support 16
Vent Temperature Limiting Switch 31
Vent Temperature Limit Switch 42
Vertical Vent/Combustion Air Kit Option CC2 23
Vertical Vent/Combustion Air Terminal (Option CC2) 25

W
Warranty 3
Wiring Diagram 29

INSTALLATION RECORD - to be completed by the installer:

Installer:

Name _____

Company _____

Address _____

_____

_____

Phone _____

Distributor (company from which the unit was purchased):

Contact _____

Company _____

Address _____

_____

_____

Phone _____

Model No. _____ Serial No._____Date of Installation _____

SPECIFIC INSTALLATION NOTES: (i.e. Location, CFM, HP, Amps, Gas Pressure, Temperature, Voltage, Adjustments, Warranty, etc.)

_____

_____

_____

_____

_____

BUILDING OWNER OR MAINTENANCE PERSONNEL:

For service or repair

- Contact the installer listed above.
- If you need additional assistance, contact the Reznor® Distributor listed above.
- For more information, contact your Reznor® Representative by calling 800-695-1901.

Thomas & Betts Corporation
150 McKinley Avenue
Mercer, PA 16137

www.RezSpec.com

(800) 695-1901

Thomas&Betts

©2012 Thomas & Betts, All rights reserved.
Trademark Notes: Reznor®, TCORE2® , TCORE3® , and MacroChannel® are registered in at least the United States.
All other trademarks are the property of their respective owners.

05/12 Form I-UEAS (Version B.2)